

Other Popular Plush Toys:

Marching Bear #64

Pudgy Piglet #312

Scooter the German shepherd #63

Roly Poly Calf #346

Rikki the Rooster #67

Floppy Bunny #150

Baby Elephant #474

G. G. Giraffe #544

Waddle Quaddle #485

Wally the Dinosaur #68

Baby Brontosaurus #54

Mumbo Hippo #475

Baby Pterodactyl #55


Enabling Devices

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Oliver Kitten

Catalog #931

User's Guide


Enabling Devices

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Oliver Kitten

Meow!

Watch Oliver Kitty walk forward and backward and wag its tail while she meows to you. Size: 7½" x 4" x 7". Requires 3 AA Batteries.

Operation:

1. Oliver Kitten requires 3 AA batteries (Not included) to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well.
2. Turn Oliver Kitten upside down to reveal the battery compartment. Install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it.
4. Connect Oliver Kitten to any external capability switch (not included) via the jack located at the end of the kitten's cord. Oliver Kitten is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to make a tight connection. There should be no gaps.
5. Actuate your external capability switch and Oliver Kitten will spring to life!
6. Oliver Kitten will walk forward and backward, wag his tail and Meow.
7. Oliver Kitten will remain on while the external capability switch continues to be actuated. Once you release the external capability switch, there will be a brief delay, and then Oliver Kitten will turn off.

Troubleshooting:

Problem: Oliver Kitten does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Please Note:

Due to switch adaptation, the sound activation capability of this toy has been disabled. Oliver Kitty will only work through the use of a capability switch.

Care of Unit:

- Do not inhibit Oliver Kitten's movement, as this may cause irreversible damage.
- Do not lift Oliver Kitten up by his tail, head or legs, or drop Oliver Kitten.
- If you will not be using Oliver Kitten for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components.

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com