
Honey Bears (Slide Toy) #334

USER'S GUIDE

For Technical Support:
Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

The Honey Bears climb, swing, tip, and tumble for hours of fun! Watch as they race against each other. Such a fun way to help young learners with their visual skills. Size: 12"L x 8"W x 12 1/2"H. Requires Capability Switch and 1 D Battery.

Operation:

1. Honey Bears requires 1 D battery (Not included). Use an alkaline battery only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly.
2. The battery compartment is located on the side of the unit. To remove the battery compartment cover, unscrew the small Phillips Head screw, then pull the cover open. Install a new battery, being careful to observe proper (+) & (-) battery polarity. Replace cover and screw.
3. Connect the unit to any external capability switch via the 1/8" cord jack, located on the side of the unit. If you need to use a 1/4" to 1/8" adapter for your switch, it must be a mono adapter, not stereo.
4. Make sure that the connections between the external capability switch and the adapter (if applicable) and the jack on the slide toy are tight. There should be no gap.
5. After assembling the track, load the supplied bears into the track at the bottom of staircase. Make sure the slide toy is on a level table. Begin play by activating and maintaining activation of your external capability switch, this will start the slide toy picking up the bears one by one. Once a bear reaches the top of the staircase, it is picked up by the mechanical arm and dropped onto the track. The bear then begins rolling down the track.
6. Once you release your switch the toy will stop. If you would like to the toy to run for a set amount of time, or by activation your switch once to start and then a second time to stop it use one of our switch latch timer modules (e.g.No.605) sold separately. There are also many of our switches that have a built in Latch/Timer function. Any of the

switches in our catalog or website with a -X after the number has this feature.

Important Note: Due to switch adaptation the ON/OFF switch has been glued in place and cannot be turned ON/OFF. Do not remove the glue to free the switch. If you do you will damage the switch adaptation and VOID your warranty. This slide toy will only work through the use of an external switch sold separately.

Troubleshooting:

Problem: The slide toy does not work.

Action #1: Check or replace the D battery with a fresh new battery.

Action #2: Make sure the slide toy is on a flat level surface and that nothing is restricting any of the bears or track. Use only the bears included with the slide toy, other slide toy pieces will not work with this product.

Action #3: Try a different switch that you know works with other toys/devices to rule out the slide toy as the source of the problem.

Problem: The slide toy runs non stop when I plug my switch into it.

Action# 1: Make sure your switch is plugged into the cord jack all the way, there should be no gap. If there is a gap the slide toy will run non stop.

Care of Unit:

The slide toy can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.