

---

---

**Lighted Boom Box- #392**  
**(Jwin Brand)**

---

---

**USER'S GUIDE**

  
**Enabling Devices**

50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

---

**For Technical Support:**  
Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

Our AM/FM stereo cassette player has been specially adapted to be switch activated with any of our capability switches. Please note: AC line cord has been removed for safety reasons. Also comes in a lighted version with colorful lights that flash in response to the music.

Please Note: AC line cord has been removed for safety reasons. Size: 18"L x 5" W x 5 ¼" H. Requires Capability Switch and 6 D Batteries

**Operation:**

1. The Lighted Boom Box requires 4 AA Batteries to operate. Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.

**Note:**

- Remove the batteries when you do not plan to use the unit for a month or more.
- Due to switch adaptation the use of an AC power cord has been disabled for safety reasons. This unit will only work with batteries.

**To operate the Radio/Cassette Recorder:**

1. For Radio: Manually slide the "FUNCTION" button to "RADIO". Set the "BAND" switch, located on the top/right to AM, FM or FM Stereo. Tune into the channel of your choice using the Tuning Dial. Adjust the volume to your desired listening level.
2. Plug your external switch into the jack located on the left side of the unit. There should be no gaps between the connection.
3. Activate your choice of Capability Switch and the radio will play, while the bright LED lights flash to the beat of the music. Activate it again and it will turn off. (Only with the use of a switch with a built in latch/timer capability). If using a momentary switch (most switches are momentary) pressing on the switch will activate the RADIO, releasing will deactivate.
4. For the Cassette Recorder: Manually slide the "FUNCTION" button to "TAPE".
5. Manually press the STOP/EJECT button to open the cassette tape compartment. Insert your audio tape with the open edge facing up and the side you want to play facing you. You can use either the A or B Tape Deck. Push the cassette door to close it. Manually push the button marked "PLAY".

6. Activate the Capability Switch and the cassette player will turn ON while the bright LED lights flash to the beat of the music or OFF. (Only with the use of a switch with latch/timer capability). If using a momentary switch pressing on the switch will activate the TAPE, releasing will deactivate.

**Note:** For a detailed description of the Boom Boxes features please refer to the Jwin original manufactures instructions.

**Troubleshooting:**

**Problem:** The Radio does not function.

**Action:**

- Check batteries for polarity placement and be sure to use fresh batteries.
- Keep mobile phones and other electrical appliances far away from the unit. Such appliances may cause noise interference or play may stop entirely.
- Be sure the FUNCTION button is in the position marked "RADO".

**Problem:** The cassette recorder is operating but there is no sound.

**Action:**

- Be sure the VOLUME control button is adjusted to an audible listening level.

**Problem:** The Radio/Tape player does not function.

**Action:**

- Be sure the FUNCTION button is pushed to either Tape/Radio. If the radio still doesn't function, check that the Channel Tuning knob is in the desired position for reception. If the cassette player still does not work, be sure the pause button is not depressed (in the down position). If it is, press it again and it will be in the "up" position. The tape will resume playing.
- Make sure you're the tape you are using is not jammed. Try another tape or try the tape in another player to rule out the Boom Box and or Tape being used.

**Care of Unit:**

- **Do not submerge** the unit in water, as it will damage the electrical components Lighted Boom Box is surface washable only.
- The Lighted Boom Box can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**