

**Important Notes:**

If the Bowling Controller is not going to be used for a long period of time, e.g. one month or longer, we recommend removing the batteries from the unit during storage to prevent battery drain or leakage, which can cause damage to the unit.

**Troubleshooting:**

**Problem:** Bowling Controller does not work.

**Action #1:** Check all batteries for proper (+) & (-) battery polarity.

**Action #2:** Replace all batteries with fresh new batteries. Never mix different brands or old and new batteries.

**Problem:** Bowling Controller works intermittently or very slowly.

**Action #1:** Check all batteries for proper (+) & (-) battery polarity.

**Action #2:** Replace all batteries with fresh new batteries. Never mix different brands or old and new batteries.

**Action #3:** Check your switch with another device you know is working to rule it out as the source of the problem.

**Care of Unit:**

Bowling Ramp can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---

---

---

# Bowling Ramp #2084

---

---

## USER'S GUIDE



**Enabling Devices**

50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
www.enablingdevices.com

*Everyone can bowl!*

A fantastic package that gives physically challenged people the opportunity to bowl. A control system attaches to our tubular bowling ramp. By activating a capability switch, the ball releases and rolls down the ramp and then down the alley. Rubber ball is included. Can also be used with a real bowling ball. Ramp Size: 62"L x 26"W x 25"H. Requires Capability Switch and 8 AA Batteries.

**Operation:**

1. Bowling Ramp requires 8 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the side and front of the unit. To remove the battery compartment covers by removing the Philips head screws from the battery covers, slide the covers and lift off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws.
3. Once you have the Bowling Ramp setup you are now ready to mount the adapted ball pusher with the two included clamps. Follow the photos for proper mounting to the ramp.



Fig. 1



Fig. 3

Fig. 2



Fig. 4

4. Connect the unit to any external capability switch via the 1/8 " jack, located on the back of the unit. If you need to use a 1/4 " to 1/8" adapter for your switch, it must be a mono adapter, not stereo.
5. Make sure that the connections between the external capability switch and the adapter (if applicable) and the jack are tight. There should be no gaps. Turn the ON/OFF switch to ON.
6. Each time you activate your switch it will push the Bowling Ball down the ramp.