

---

---

## Silent Reminder- #1156

---

---

## USER'S GUIDE

---

**For Technical Support:**  
Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---

  
**Enabling Devices**

50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Silently alert your student that he/she is exhibiting unacceptable behavior. Place the vibrating receiver on the student's belt or in their pocket and keep the transmitter at your desk. Pressing your transmitter's button will cause the receiver to vibrate. Can be used in a variety of behavior paradigm. Size: 2.5"x 3.5" x 1". Requires one 6-Volt Battery and two AA Batteries (Not included).

### **Operation:**

1. The Silent Reminder requires 2 AA and 1- 6 Volt battery. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. To install the 6-V battery in the small rectangular transmitter, you must first carefully slide off the battery cover. Once the cover is off install the battery paying close attention to proper (+) and (-) polarity. Replace cover. For replacement battery use a GP super alkaline No.476A 6V or equivalent.
3. To install the two AA batteries in the vibrating receiver you must first remove the battery cover by sliding it off. Next install the two AA batteries paying close attention to proper (+) and (-) polarity, and replace cover.
4. Place the Vibrating Receiver on the person's belt or in their pocket and keep the transmitter with you. When the need arise to get their attention simply press your transmitter's button. This will cause the receiver to vibrate alerting that their actions are unacceptable. The vibration will stay on for as long as the transmitter's button is pressed. **Please note: the maximum range of this device under ideal conditions is 30 feet.**

5. There are many other useful ways to use this handy device. Please note: you cannot use two of these devices in the same room; doing so will cause activation of both vibrating receivers when one transmitter has been activated.

### **Troubleshooting:**

**Problem:** The Silent Reminder does not activate.

**Action #1:** Make sure that all batteries are installed following proper (+) and (-) polarity. Batteries must be fresh, if weak or dead replace.

**Action #2:** Make sure that the distance from the receiver and transmitter is no more than 30 feet away at any given time. This is the maximum range of use for this device.

### **Care of Unit:**

The Silent Reminder can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.