
Disco Box - #3110

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com



Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Optics light show!

Activate your capability switch and add drama to your room! This light show is a spectacular illusion of hundreds of glowing lights twinkling, pulsating and chasing one another through a mirrored tunnel. It has 8 different light patterns and can be used on a table top or wall mount. Front panel can be used as a mirror when unit is turned off. AC Adapter Input. Can also work without capability switch by just turning unit on. Size: 8"H x 8"W x 4"D. Requires 4 AA Batteries.

Operation:

1. The Disco Box requires 4 AA batteries (not included) and the supplied AC power adapter to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Carefully turn the transformer box over and remove the small screw from the battery compartment. Slide the battery compartment cover off. Observing polarity, install four AA size batteries (Not included) into the holder. Replace the battery compartment cover and screw.
3. Plug any capability switch into the 1/8" jack located on the transformer box, make sure the switch is plugged in all the way. There should be no gaps between the connections, if there is a gap the Disco Box will stay ON and your switch will have no control over the Disco Box.
4. There is an ON/OFF toggle switch on the transformer box. Set the ON/OFF switch to ON. With your external switch the Disco Box will turn ON and stay on for as long as the switch is activated. Once the switch is released the Disco Box will turn OFF. If you remove your external switch the Disco Box will stay ON unless you flip the toggle switch back to the OFF position.

Troubleshooting:

Problem: Disco Box does not function correctly.

Action #1: Make sure you have the ON/OFF toggle switch located on the transformer switch box set to ON.

Action #2: Replace the batteries in the transformer box paying close attention to proper battery polarity.

Action #3: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #4: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Action #5: Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries. If the unit does not work correctly, replace all the batteries paying careful attention to proper polarity.

Care of Unit:

If you will not be using Disco Box for an extended amount of time, we recommend removing the batteries.

The Disco Box can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.