
Drum - #80

USER'S GUIDE


Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

Here's a toy that no child will be able to resist! When activated by an external capability switch, the drumstick twirls, beating a fast, rhythmic drum roll to the delight of all. Provides exciting auditory stimulation.

Operation:

1. The Drum requires one two-D size batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types of batteries together.
2. The battery compartment is located under the drum. Install new batteries, being careful to *observe proper battery polarity*.
3. Connect the unit to any external capability switch via the jack, located on the end of the unit. The Drum #80 is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter, it must be a mono adapter, (our No.1170) not stereo.
4. Make sure that the connections between the external capability switch and the adapter (if applicable) AND the adapter and the jack on the Drum are tight. There should be no gaps.
5. Activate the external capability switch to begin the drum rolls.
6. The Drum will continue beating while the external capability switch continues to be activated. Once you release the switch, the Drum will stop.

Troubleshooting:

Problem: The drum fails to operate.

Action #1: Be sure drumstick is not stuck against the face of the drum. If it is, gently pull it away from the face of the drum and gently straighten spring.

Action #2: If the drumstick is not stuck against the face of the drum, replace the batteries paying attention to proper polarity.

Problem: The drum stick spins, but either (a) does not strike the drum, or (b) does not strike the drum properly.

Action #1: Gently bend the drumstick slightly at the spring to the appropriate position for optimal play.

Care of the Unit:

The base and sides of the Drum can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.