
Lovely Monkey- #8045

USER'S GUIDE

For Technical Support:
Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Rat-a-tat-tat!

Add your capability switch and watch this adorable monkey swing his head and beat on his drum. This is a great toy for learning cause and effect. Size: 7"H x 4"W x 5 1/2"D. Requires Capability Switch and 2 AA Batteries.

Operation:

1. Lovely Monkey requires 2 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located under Lovely Monkey's base. Turn Lovely Monkey over then, using a Phillips head screwdriver remove the batter cover screw and lift cover off. Next install 2 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. For external switch use set the on/off switch to off.
4. Connect Lovely Monkey to any external capability switch (not included) via the jack located at the end of his cord. Lovely Monkey is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have a tight connection. There should be no gaps.
5. Actuate your external capability switch and watch him sway from side to side as he plays his drum. Lovely Monkey will remain on while the external capability switch continues to be actuated. Once you release the external capability switch, there will be a brief delay, and then Lovely Monkey will turn off.

6. You can also play with Lovely Monkey without an external capability switch. Simply turn his on/off switch to on, which is located under his base.
7. **Please Note:** When you are finished using Lovely Monkey remove your external switch and set his on/off switch to off. This will help prevent false activations and conserve battery life. For prolonged storage we recommend removing the batteries to prevent battery drain and or battery leakage which can cause damage to Lovely Monkey's electronics.

Troubleshooting:

Problem: Lovely Monkey does not function correctly or drumming is slow.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

Do not submerge the unit in water, as it will damage the electrical components. Lovely Monkey is surface washable only.