

### **Takes all punches!**

When gooshy pad is struck, various sound effects play at different levels while lights track upward, indicating the amount of force applied. When struck full force the child is rewarded with a rainbow of lights, vibration, music, spinning glitter and sound effects. Desired pressure levels are easily adjusted by an adult. Size: 11"W x 14"D x 21"H. Requires 6 AA Batteries.

#### **Operation:**

1. The High Striker requires 6 AA batteries. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartments are located under the unit. Carefully turn the unit over. The battery case covers are secured with one small screw each. Remove the screws by turning them counterclockwise with a Phillips head screwdriver. Install AA batteries in each of the compartments, being careful to observe proper battery polarity.
3. Replace the battery case covers and secure with the screws. Do not over-tighten.
4. The ON/OFF/VOLUME and SENSITIVITY control knobs are located on the bottom of the unit. Turning the ON/OFF/VOL knob clockwise turns the unit on as well as controls the volume of the sound effects only (Music volume can not be adjusted). Turning the SENSITIVITY knob changes how much force is needed when the Gooshy pad is struck. Clockwise increases sensitivity, counterclockwise decreases sensitivity.
5. When gooshy pad is struck, various sound effects play at different levels while lights track upward, indicating the amount of force applied. When struck full force the child is rewarded with a rainbow of lights, vibration, music, spinning glitter and sound effects.

#### **Troubleshooting:**

**Problem:** There are no lights, music, sound effects or vibration.

**Action #1:** Rotate (spin) the batteries within the battery compartment to ensure a good connection.

**Action #2:** Check all batteries for freshness, if weak or dead replace with new batteries.

**Action #3:** Make sure volume is set to an audible listening level.

**Action #4:** Make sure sensitivity is adjusted for the user's strength.

#### **Care of Unit:**

The High Striker can be wiped clean with any household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit, as this could damage the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.

#### **For Technical Support:**

Call our Technical Service Department  
Monday through Friday: 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

**Other Popular Specially Adapted Products:**

Sparkles the Clown #66

Somatosensory Bead Chain #355

Somatosensory Bead Chain with Mirror #356

Somatosensory Musical Bead Chain/Switch #357

Deluxe Razzle Dazzle Bead Chain Curtain/Switch #361

Razzle Dazzle Bead Chain Curtain #362

Wall-Mounted Activity Center #556

Sensory Plate/Switch #885

Lighted Sensory Plate/Switch #886

Compact Activity Center #2300

Crawl-Through Bead Chain #206

Musical Bead Chain with Mirror, Lights & Vibration #659

---

  
**Enabling Devices**

50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

---

# High Striker

---

## Catalog #2242

## User's Guide

  
**Enabling Devices**

50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)