
Classical Violin #3102

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com



Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Realistic sounds!

Our toy violin has realistic details and sounds. Move the bow across the strings, or activate your capability switch by hitting the switch to the beat of the music and the toy violin will play all the right notes. With a push of a button you can play eight different songs. The songs included are Menuet, Ode to Joy, Auld Lang Syne, Red River Valley; You are My Sunshine, Green Sleeves, Santa Lucia, Die Forelle. Size: 8"L x 2 3/4"W x 8"H. Requires 2AA Batteries.

Operation:

1. Classical Violin requires 2 AA Batteries to operate. Turn the unit over and located the battery compartment. Open the battery cover with the end of a flat head screwdriver or a quarter, and then lift the cover off. Observing polarity, install 2 AA size batteries (Not included) into the holder. Alkaline batteries are required. Do not use heavy duty or rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. Connect Classical Violin to any external capability switch (not included) via the input jack. Classical Violin is equipped with a 1/8" input jack for use with external capability switches with a 1/8" plug. Make sure you have a tight connection. There should be no gaps.
5. Classical Violin plays the following songs Menuet, Ode to Joy, Auld Lang Syne, Red River Valley, You Are My Sunshine, Green Sleeves, Santa Lucia and Die Forelle. Each time you activate your switch the Classical Violin will play a cord from the song it is set on. To change a song press the SONG/SELECT button on the back of the Violin. To stop a song and reset to the first song press the STOP/RESET button on the back of the Violin.
6. Song Magic Guitar can also be played without the use of a switch, by a strum of the bow over the strings. There is also a DEMO mode button on the back of the Violin, when pressed it will play the song the Violin is set to.

Troubleshooting:

Problem: Classical Violin does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Action #4: Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries. If the unit does not work correctly, replace all the batteries paying careful attention to proper polarity.

Care of Unit:

If you will not be using Classical Violin for an extended amount of time, we recommend removing the batteries.

The Classical Violin can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.