
Wooden Music Box #7003

USER'S GUIDE



Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

Activate your capability switch (not included) and you will be delighted to see who pops out of this classic tin jack-in-the-box. It's Curious George, the cutest plush puppet. This toy has been enjoyed for generations and is a classic toy for all. Plays Pop goes the Weasel. Size: 7.5"W x 5.5"H x 5.5"D. Requires 4 AA Batteries.

Operation:

1. Wooden Music Box requires two AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the unit to face the black battery compartment. Carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and slide the cover off. Observing proper (+) & (-) battery polarity, install two AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Connect Wooden Music Box to any external capability switch via the cord jack, located next to the battery compartment. The Wooden Music Box is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter use our No.1170 adapter. If purchased elsewhere, it must be a mono adapter, not stereo.
4. Place one or both of the wooden figures in the circle on top of the Music Box. Next actuate your external capability switch and continue to actuate it to start the figures moving around the circle while playing music.
5. The figures and music will only continue spin and play while the external capability switch is actuated. Once you release the switch, the figures and music will stop.

Troubleshooting:

Problem: The figures don't spin and there is no music.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Action#3: Make sure that you have a tight connection between the external switch and the Wooden Music Box. There should be no gaps.

Action#4: Try your external capability switch with another toy/device to rule out the switch as the source of the problem.

Care of the Unit:

The Wooden Music Box can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.