

Water Fall Water Toy



Catalog No. 9016


Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Your own tropical paradise!

Hit your switch and this unique water toy squirts water from flowers while a stream rambles down a volcano with multi-colored lights. Music plays and the lagoon sparkles. Special tabs allow you to clamp toy to table tops.

Size: 20"L x 15"W x 10"H. Requires 6 C Batteries.

Operation:

1. Carefully turn over unit to reveal battery compartments. Remove the cover then, observing proper + & - polarity, install six C size batteries into the holders. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.



Operation No. 1

2. Fill the Water Toy with water from the tap, until the lagoon is filled. Do not overfill. Plug your external capability switch (Not Included) into the female 1/8" jack located on the side of the unit. Located next to the switch jack is a toggle switch. Setting this switch in one direction will start the water running, and keep it flowing until the switch is pushed in the opposite position. While the toggle switch is in the auto flowing water position, your switch will only control activation of the lights and music. Once your switch is released the music and lights will stop, while the water will continue to flow. The second setting for the toggle switch allows you to control the water flow, lights and music through activation of your switch. Activating your switch will start the water, lights and music, releasing it will stop all three.

Table Top Clamping: The four corners of the base are made to be used if desired with C-Clamps (Not included) for secure mounting. Tighten C-Clamps just enough to hold unit securely. Over tightening of clamps will cause damage or crack base, and void your warranty.




Operation No. 2

3. The water flow rate has been factory set for optimum performance, however if need be it can be adjusted following these simple steps. To adjust the water flow, the screw in the back of the volcano must first be removed. Using a Phillips head screwdriver remove the screw. Next lift the volcano up from the back, while pulling it slightly towards you, just enough to clear the front mounting tab on the bottom front of the volcano. See photo.



Operation No. 3

4. Rest the volcano to one side so you can have access to the water flow valve clamp. Squeezing the flow valve clamp as shown below, will decrease or slow down the water flow. Pressing it so the valve clamp opens will increase the water flow.

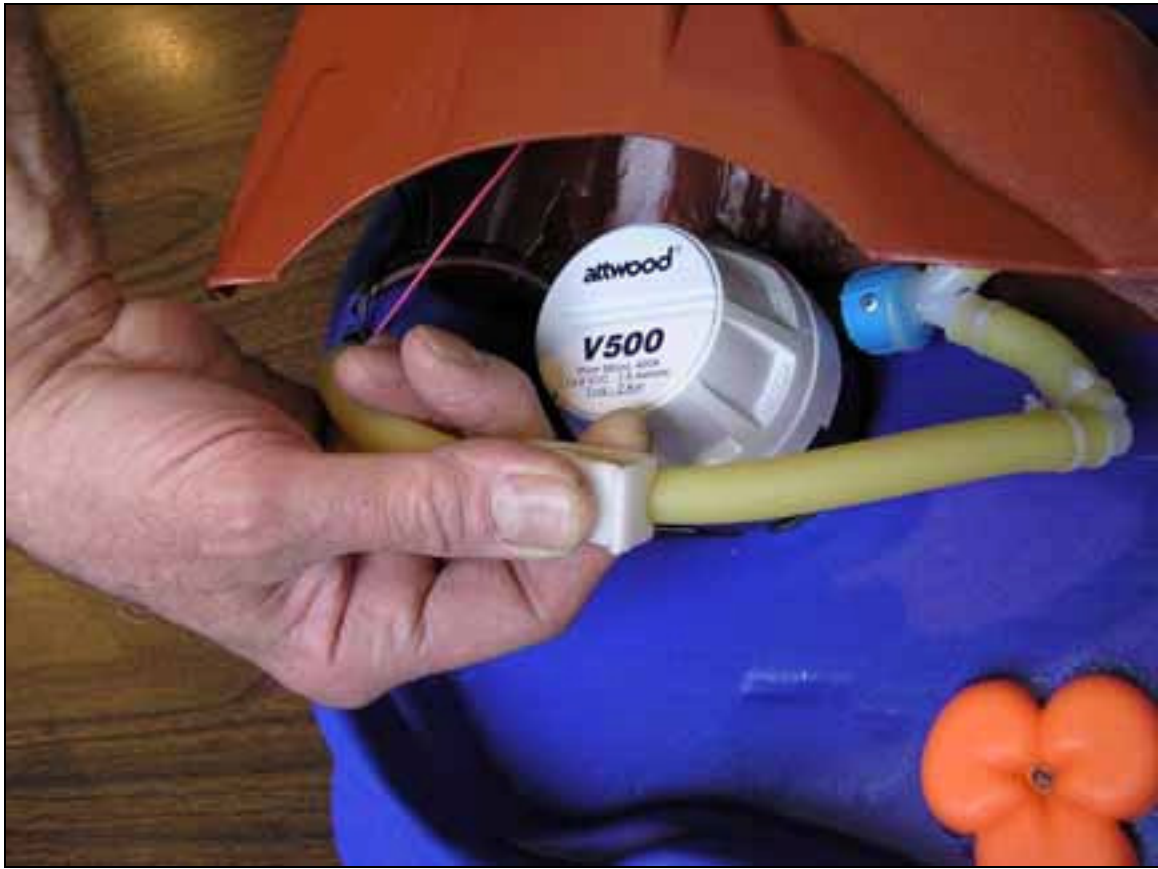

Operation No.4

Troubleshooting:

Problem: Water Fall Water Toy does not turn on when switch is depressed.

Action #1: Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection.

Action #2: Make sure batteries are fresh.

Action #3: Try a different switch with Water Fall Water Toy to rule it out as the source of the problem.

Problem: The lights do not work.

Action: Check batteries for proper (+) & (-) installation and freshness replace all C cell batteries if dead or weak with fresh batteries.

Problem: The music does not work.

Action: Check batteries for proper (+) & (-) installation and freshness replace all C cell batteries if dead or weak with fresh batteries.

Problem: The water does not flow.

Action #1: Check batteries for proper (+) & (-) installation and freshness replace all C cell batteries if dead or weak with fresh batteries.

Action #2: Check to make sure nothing is blocking or pinching the water outlet hose.

Action #3: Check that the water pump is not clogged and seated properly (See operation No.3 for pump access). Facing the unit with the pump at the bottom right-hand side, turn the pump counterclockwise. The pump should then lift up, do not pull on the pump, and simply turn the pump over so you can visually inspect the pump's impellor for any blockage. Replace pump back down and turn clockwise. Caution: Do Not Force Pump in either direction, doing so could damage the pump.

Care of Unit:

Empty the water from Water Fall Water Toy when you are finished using it, and then wipe the inside with a paper towel or cloth, and let air dry.

Water Fall Water Toy can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com