
Aqua Bubbles #2272

USER'S GUIDE



Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

Illuminating LEDs!

Watch the calming colorful bubbles as they float about while the multi-colored lights continuously change. Great for increasing visual attention and cause and effect. Can be used with or without a capability switch.

Size: 11"H x 5 1/2 "W. Requires 3 AA Batteries.

Operation:

1. Aqua Bubbles requires 3 AA batteries. The battery compartment is located under the base of the unit. Carefully turn the unit over, and remove the battery cover. Install new batteries, being careful to observe proper battery polarity. Alkaline batteries must be used only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old, new or different types of batteries together. Replace the battery compartment cover.
2. Remove the top cover and fill with bottled or distilled water for optimal performance. Do not over fill the unit. Leave about ½ inch gap at the top.
2. Next plug in your external capability switch into the female 1/8" jack, located in the side of the unit. If your switch has a ¼" male plug, then order one of our #1170 ¼" to 1/8" adapters. Make sure the male plug is pressed firmly into the female jack, there should be not gaps. Set the Aqua Bubble's **ON/OFF** switch to **OFF** for external switch use. You can now activate the Aqua Bubbles with your switch.
3. When you activate your switch the bubbles will flow accompanied by changing lights. Once you release your switch the bubbles and lights will stop.
4. The Aqua Bubbles can be used normally without the use of a switch.

Important Notes:

Due to switch adaption the AC power adapter function has been disabled for safety reasons. It has also been removed from the packaging even though it is noted as an included item on the outside of the box. This device will only work through the use of batteries and cannot be altered to work with an AC adapter.

Troubleshooting:

Problem: The Aqua Bubbles does not turn on when switch is depressed.

Action #1: Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection. The Aqua Bubble's **ON/OFF** switch needs to be set to **OFF** for external switch use.

Action #2: Make sure batteries are fresh.

Action #3: Try a different switch with your Aqua Bubbles to rule it out as the source of the problem.

Notes:

- If the Aqua Bubbles is not used for an extended period, make sure to remove the batteries and empty the water.
- This unit is intended for indoor use only.
- Do not operate this unit near or around electrical appliances.

Care of Unit:

The Aqua Bubbles can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.