
Air-tivity Ball Popper #157

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Magically powered by air!

It's poppin', droppin' air-powered fun! Activate your switch and watch the colorful balls pop up and then follow them down the track. Hear silly sound effects and 8 lively songs which play up to 25 to 40 seconds. The Air Toy is an "air-mazing" experience! Toy runs for 20-30 seconds after switch activation. Size: 15"L x 9"W x 16"H. Requires Capability Switch and 4 D Alkaline Batteries.

Operation:

1. The Air-tivity requires four D batteries (Not included). Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located on the back of the unit. To remove the battery compartment cover, unscrew the small Phillips Head screw, then slide the cover back and then off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace cover and screw.
3. Turn the ON/OFF switch located on the back of the unit to the ON position. Connect the unit to any external capability switch via the 1/8" jack, located on the back of the unit. If you need to use a 1/4" to 1/8" adapter for your switch, it must be a mono adapter, not stereo.
4. Make sure that the connections between the external capability switch and the adapter (if applicable) and the jack on the Air-tivity are tight. There should be no gaps.

5. Load the supplied balls into the ball slid. Begin play by activating your external capability switch. This will start the balls popping up into the clear dome and rolling down the track, while simultaneously playing silly sound effects and up to eight lively songs.
6. The Air-tivity will continue playing while your switch continues to be activated. Once you release your switch, there will be a brief delay then all will stop.

Troubleshooting:

Problem: The Air-tivity does not work.

Action #1: Check or replace the four D batteries with fresh new batteries. Never mix different brands or old and new batteries.

Action #2: Make sure the Air-tivity is on a flat level surface and that nothing is restricting any of the balls. Use only the balls included with Air-tivity, other balls will not work with this product.

Action #3: Try a different switch that you know works with other toys/devices to rule out the Air-tivity as the source of the problem.

Care of Unit:

The Air-tivity can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.