
CD Boom Box - #393
(COBY Brand)

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

For Technical Support:
Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

CD BOOM BOX

Switch-adapted with CD player! This switch-adapted boom box has a CD player, AM/FM radio and a cassette player all in one unit! Simply plug your external capability switch into the radio/cassette jack to play music, or plug your switch into the CD jack to activate your favorite CD. Please note: AC line cord has been removed for safety reasons.

Operation:

1. **The CD boom box requires “D” batteries (not included) to operate.** Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Install the batteries, with careful attention to the battery polarity. Be sure the + and - poles are facing in the correct directions as shown near the battery compartment.

Note:

- Do not mix new batteries with old ones.
- Remove the batteries when you do not plan to use the unit for a month or more.
- Only connect one switch to the CD Boom Box. Connecting two switches will disable the CD Boom Box.
- Due to switch adaptation the use of an AC power cord has been disabled for safety reasons. This unit will only work with batteries.

To operate the CD player:

1. Slide the oblong “FUNCTION” button on the upper left hand side of the unit to the position marked “CD”.
2. Open the CD compartment by lifting the door located on the top portion of the unit and slightly to the right, labeled “OPEN”. Insert your CD, label side up, over the center hub of the disc and gently press the center of the CD until it snaps down. Gently close the compartment door.
3. There are two adapted switch female outlets located on the left side of the unit. Insert a capability switch into the outlet marked “CD”. (Female outlet accepts only 1/8" plug)
4. When the Capability Switch you have chosen is activated the CD player will turn ON. It will then display the number of tracks that your CD has on it. Press your switch again, and the CD will start to play the first track. Press the switch again to pause the track. (The manufacturer’s ON/OFF knob will work concurrently.)

To operate the Radio/Cassette Recorder:

1. For Radio: Manually slide the “FUNCTION” button to “RADIO”. Set the “BAND” switch, located on the top/right to AM or FM. Tune into the channel of your choice using the large knob on side of the unit just below the BAND switch. Adjust the volume to your desired listening level.
2. Insert the 1/8" plug into the adapted switch jack located on the left side of the unit marked “RADIO/TAPE”.

3. Activate your choice of Capability Switch and the radio will play. Activate it again and it will turn off. (Only with the use of a switch with latch/timer capability). If using a momentary switch pressing on the switch will activate the RADIO, releasing will deactivate.

1. For Cassette Recorder: Manually slide the oblong “FUNCTION” button to “TAPE”.

2. Manually press the STOP/EJECT button to open the cassette tape compartment. Insert your audio tape with the open edge facing up and the side you want to play facing you. Push the cassette door to close it. Manually push the button marked “PLAY”.

3. Insert the 1/8" plug into the adapted switch jack marked “RADIO/TAPE” on left side of unit.

4. Activate the Capability Switch and the cassette player will turn on or off. (Only with the use of a switch with latch/timer capability). If using a momentary switch pressing on the switch will activate the TAPE, releasing will deactivate.

Troubleshooting:

Problem: The CD does not function.

Action:

- Check batteries for polarity placement and be sure to use fresh batteries.
- Keep mobile phones and other electrical appliances far away from the unit. Such appliances may cause noise interference or play may stop entirely.
- Be sure the FUNCTION button is in the position marked “CD”.
- Make sure you only have one switch connected to the CD Boom Box at a time.

Problem: The cassette recorder is operating but there is no sound.

Action:

- Be sure the VOLUME control button is adjusted to an audible listening level.

Problem: The Radio/Tape player does not function.

Action:

- Be sure the FUNCTION button is pushed to either Tape/Radio. If the radio still doesn’t function, check that the Channel Tuning knob is in the desired position for reception. If the cassette player still does not work, be sure the pause button is not depressed (in the down position). If it is, press it again and it will be in the “up” position. The tape will resume playing
- Make sure you only have one switch connected to the CD Boom Box at a time

Note:

- The AM antenna is built in and directional. Turn the unit to get the best reception. For FM, extend the antenna located on the back of the unit and turn it to get the best reception.
- If a CD skips it may need cleaning. Wipe off any fingerprints with a soft cloth.
- Do not get wet. Follow manufacturer’s recommendations for cleaning.