

Multi Directional Scooter Board Frequently Asked Charging Questions

1) What is the average "ride time" on the Multi Directional Scooter Board?

Ride time is effected by a number of variables such as the child's weight, terrain, state of battery charge and temperature. You can normally expect about 1 hour +, under average riding conditions.

2.) How long will my Multi Directional Scooter Board's battery last under normal use?

The more often the battery is used, the longer it will last. Using the rechargeable battery once or twice a year will actually shorten the life span of the battery. Recharge the battery at the end of every day that it is used, even if it was only used for 20 minutes. The battery will not build up a "memory" effect. The battery is the same type of battery found in an automobile. The battery should never be completely drained of power. If the batteries are not being used for a long period, recharge them at least once a month for 12 hours.

Rechargeable battery life span is directly related to the average depth of discharge. If the batteries are repeatedly discharged beyond the 50% threshold they will last a short time. If the batteries are fully discharged repeatedly they will only last weeks or months before complete failure to hold a charge. The shallower the discharge the longer the battery life. Properly charged and discharged batteries will last about two to three years.

3.) DO NOT, DO NOT; attempt to charge your batteries with an automobile type charger, use only the charger supplied with your Multi Directional Scooter Board. Refer to your owner's manual for charging instructions.

4.) When should I recharge my Multi Directional Scooter Board's battery?

A.) After each use, regardless of how long the vehicle is used. The more often the batteries are charged, the longer they will last. Charging the batteries once or twice a year will actually shorten the life span of the battery. The Scooter's ON/OFF switch should be set to OFF during charging.

B.) When the Multi Directional Scooter Board starts to loose power and runs sluggishly.

C.) DO NOT, DO NOT, run the batteries down completely. The battery will not build up a "memory effect". The battery is the same type of battery found in an automobile.

D.) DO NOT, DO NOT, store your Multi Directional Scooter Board with discharged batteries, and fully charge them before storage and once a month thereafter.

5.) How long should I charge my Multi Directional Scooter Board battery?

Battery Charging should never be for less then 6 hours or more than 12 hours at a time. Recharging less then 6 hours will decrease the life of the battery. Recharging for more than 12 hours consecutively will begin to damage the battery cells.

DO NOT, DO NOT charge the batteries for more then 12 hours.

Note: If your batteries have not been charged for a long period of time or have been fully discharged check the charger after approximately one hour of operation. The charger should be warm to the touch, if it is hot disconnect it from the wall outlet and battery immediately.

The Multi Directional Scooter Board has automatic thermal protection. If the machine is motion arrested, over loaded or traveling over soft terrain or thick grass it will automatically shut down when it reaches its electrical limitation. This feature is for the protection of your child, DO NOT alter or remove any components in order to override this Safety Feature that is built into your particular machine.