

---

---

# Song Magic Guitar #4059

---

---

## USER'S GUIDE

---

### For Technical Support:

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---



**Enabling Devices**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

*Be a rock star!*

Jam simply by activating your capability switch or waving your hand through the opening in the center of the guitar. It plays five songs including, "Mary had a Little Lamb", "Pop Goes the Weasel", and "When the Saints Go Marching In", plus original blues and pop tunes. Size: 14 1/2"L x 8"W x 1"D. Requires a Capability Switch and 3 AA Batteries.

**Operation:**

1. Song Magic Guitar requires 3 AA Batteries to operate. Turn the unit over and located the battery compartment. Carefully remove the small screw from the battery compartment cover and lift the battery compartment cover off. Observing polarity, install 3 AA size batteries (Not included) into the holder. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. Connect Song Magic Guitar to any external capability switch (not included) via the input jack. Song Magic Guitar is equipped with a 1/8" input jack for use with external capability switches with a 1/8" plug. Make sure you have a tight connection. There should be no gaps.
5. Activate your switch and Song Magic Guitar will rock out a tune for as long as your switch is activated. Once you release your switch there will be a brief delay and the Guitar will stop. Each activation of your switch will change the song. Song Magic Guitar plays up to 5 different songs.
6. Song Magic Guitar can also be played without the use of a switch, by a strum of your hand over the light beam.

**Please Note:** Subdued/dim or extremely bright lighting may cause erratic operation. The units Photocell will not detect a change in light under these conditions. Normal room lighting is best.

**Troubleshooting:**

**Problem:** Song Magic Guitar does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

**Action #4:** Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries. If the unit does not work correctly, replace all the batteries paying careful attention to proper polarity.

**Care of Unit:**

If you will not be using Song Magic Guitar for an extended amount of time, we recommend removing the batteries.

The Song Magic Guitar can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**