
Bilingual Alpha Bot #3811

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com



Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030

www.enablingdevices.com

Speaks English and Spanish!

A new interactive talking robot that reinforces letter recognition, number identification and nursery rhymes. It has LED display, and is easily switched from English to Spanish. Requires a capability switch.

Size: 8"H X 7 1/2" X 3 1/2"D. Requires 2AA Batteries.

Operation:

1. Alpha Bot requires 2 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. To install the batteries locate the battery cover on the back for the robot. Using a Phillips head screw driver remove the screw and lift cover off. Following proper (+) & (-) battery polarity, install 2 AA batteries into the compartment. Replace cover and screw.
3. This is an interactive talking robot with letters, numbers and nursery rhymes. Turn the switch on in front and plug in any capability switch to activate Alpha Bot. There is a large bright led screen that lights up numbers or letters as Alpha speaks.
4. There are three speaking modes. The first counts 1 to 10 in sequence every time you hit the switch the second is saying the complete alphabet in order every time you hit your switch and the final mode has two different activates. First a nursery rhyme plays as you see the letters A thru Z light up in sequence. The second plays a different nursery rhyme as 1 thru 10 numbers light up. The average size of both the numbers and letters are 1/1/4" High by 1" wide. Please note in both nursery rhyme activities you only have to hit the switch once and it will play in its entirety.

Troubleshooting:

Problem: Alpha Bot does not speak.

Action: Check the 2 AA batteries under Telly's right foot for proper instillation and freshness.

Problem: Telly does not play.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Action#3: Make sure that you have a tight connection between the external switch and Telly. There should be no gaps.

Action#4: Try your external capability switch with another toy/device to rule out the switch as the source of the problem.

Care of the Unit:

Bilingual Alpha Bot can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.
Do not submerge the unit, as it will damage the electrical components.**