

---

---

## **Basset Hound #513**

---

---

## **USER'S GUIDE**

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---

  
**Enabling Devices**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

*Bow wow!*

Activate your capability switch and take your dog for a walk. Basset walks, sniffs, and wags his tail when he is with you. He is so soft and cuddly. Size: 12"L x 6"H. Requires 2 C Batteries.

**Operation:**

1. Basset Hound requires 2 C Batteries to operate. Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. Turn Basset Hound upside down to reveal the battery compartment. Remove the small screw with a Phillips Head screwdriver. Install 2 C batteries paying close attention to proper battery polarity. Replace the battery compartment cover and screw.
3. Connect Basset Hound to any external capability switch (not included) via the jack located at the end of Basset Hound's cord. Basset Hound is equipped with a 1/8"jack for use with external capability switches with a 1/8"plug. Make sure to make a tight connection. There should be no gaps.
4. Actuate your external capability switch and Basset Hound will spring to life! He will walk forward, move his head and bark.
5. Basset Hound will remain on while the external capability switch continues to be actuated. Once you release the external capability switch, there will be a brief delay, and then Basset Hound will turn off.

**Troubleshooting:**

**Problem:** Basset Hound does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper (+) & (-) battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

**Care of Unit:**

- Do not inhibit Basset Hound's movement, as this may cause irreversible damage.
- Do not lift Basset Hound up by his head, tail or legs, or drop Basset Hound.
- If you will not be using Basset Hound for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Basset Hound is surface washable only.