

---

---

## **Starlight- #324**

---

---

## **USER'S GUIDE**

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---



385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

Activate your capability switch and the Starlight fiber optic light will amaze you with 29 different lighting effects and 6 built-in sounds of nature and new age. There is a volume control and the Starlight can stand 4 feet tall on its legs or sit on a tabletop at 16 inches high. Size: 7" round x 16"H. (Stands 4ft. tall with included removable legs.) Requires Capability Switch and 3 AA Batteries.

### **Operation:**

1. Starlight requires three AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn the unit over. Next to reveal the battery compartment you must rotate the extended round base counter-clockwise and lift off. Carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and lift the cover off. Observing proper (+) & (-) battery polarity, install three AA size batteries into the holder. Replace the battery compartment cover and screw. Replace the round base and rotate clockwise until it stops.
3. Insert the Fiber optic stem into the center of the Starlight. Next set the Volume to a desirable level. Turn Starlight ON and adjust any settings at this time. **Please Note:** The Starlight can work with or without the use of external switches.
4. Connect Starlight to any two external capability switches via the input jacks, located on the top of the unit. One switch will start and stop the rotation of the Starlight, and the lights. Actuating your switch once will start the rotation and lights, a second actuation will stop them. The second switch will change the sounds each time the switch is activated. The Starlight is equipped with two 1/8" jacks. If you need to use a 1/4" to 1/8" adapter use our No.1170 adapter. If purchased elsewhere, it must be a mono adapter, not stereo.

**For a detailed description of all the Starlight's features reference the original manufactures instructions.**

### **Troubleshooting:**

**Problem:** Starlight does not spin and/or there is no sound/music.

**Action #1:** Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

**Action #2:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

**Action #3:** Make sure that you have a tight connection between the external switches and the Starlight. There should be no gaps.

**Action #4:** Try your external capability switches with another toy/device to rule out the switches as the source of the problem.

### **Care of the Unit:**

The Starlight can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**