

---

---

## **Batmobile #8040**

---

---

## **USER'S GUIDE**

---

### **For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---

  
**Enabling Devices**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

*Let's go to Gotham City!*

Save the day with your Batmobile radio control vehicle. Use the large yellow switch with directionality arrows to go right, left, forward or backward. Easy and fun to use with the slightest touch. Batmobile Size: 9"L x 5"W x 4 3/4" H; Remote Size: 6"D x 3"H. Requires 5 AA Batteries.

**Operation:**

1. The Batmobile requires 3 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. To install the batteries in the Batmobile, first turn it over. Next using a Philips Head screwdriver, remove the two screws on the battery cover then lift up and slid the cover off. Install 3 AA batteries following proper (+) & (-) battery placement. Replace battery cover and screws. Turn the Batmobile's ON/OFF switch located on the bottom of the car to ON.
3. To install the battery for the big button remote control, turn the remote over. Install two AA batteries. Alkaline batteries are required for best range of use and performance of this toy. Turn the ON/OFF toggle switch to ON.
4. This big button controller allows the user to move the Batmobile forward, reverse, left or right. Slight pressure on the control button in any of the four directions will drive the Batmobile in that direction. Once you release pressure on the button the Batmobile will stop. **For best results only drive the Batmobile on smooth surfaces or short pile carpet...**
5. When you are finished using the Batmobile turn the ON/OFF switch to OFF, this will help conserve battery power. The big button controller's ON/OFF switch should also be turned OFF. If the Batmobile is not going to be used for a long period of time, e.g. one month or longer, we recommend removing the batteries from the Batmobile and controller during storage to prevent battery drain or leakage, which can cause damage to the Batmobile and big button controller.

**Troubleshooting:**

**Problem:** Batmobile is not running.

**Action:** Make sure batteries in the Batmobile and the controller are fresh and installed following proper (+) & (-) battery placement.

**Problem:** Batmobile is running intermittently.

**Action:** Replace batteries in the remote control and Batmobile. Weak batteries will severely limit the normal transmitting range of your remote control.

**Problem:** Batmobile does not react, or reacts poorly to operation by controller.

**Cause:** High-frequency interference occurred near to high-voltage lines, transformers and some types of building.

**Action:** Avoid these if possible, or choose another place to operate the Batmobile.

**Problem:** Loss of control.

**Cause:** Another radio control vehicle using the same frequency is operated near your vehicle. Out of sight or the control range of distance. (15 to 20 feet.)

**Please Note: do not use two Batmobiles near each other.**

**Action:** Move to another place where radio frequency interference from another device or vehicle is not present.

**Care of Unit:**

The Batmobile can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.