

---

---

## Weeble Switches #1023

---

---



## USER'S GUIDE

---

### For Technical Support:

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

  
**Enabling Devices**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030

[www.enablingdevices.com](http://www.enablingdevices.com)

Cute! Interchangeable, adorable Weebles appeal to everyone. Vibrating switch is extremely sensitive to the slightest touch and the wide base provides exceptional stability. Switch base comes with three Weebles randomly selected. We cannot accept requests for specific Weebles. Switch Size: 8½"L x 10"W x 2"H. Requires 1 N-Cell Battery.

### **Operation:**

1. The Weeble Switch requires one N-Cell battery (Not included). The battery compartment is located under the base of the unit. Carefully turn the unit over, and then remove the Philips head screw from the battery cover, slightly lift up on the cover and slide it to one side to access the battery compartment. Install a new battery, being careful to observe proper battery polarity. An Alkaline battery must be used only (e.g. Duracell or Energizer brand). Do not use a rechargeable battery or any other type of battery because they supply lower voltage and the unit will not perform properly. Replace the battery compartment cover and screw.
2. Attach one of the Weeble bodies to the base and press firmly enough to engage the Velcro. As shown on back the back page of this guide.
2. Plug the Weeble Switch into the jack on your switch-adapted toy/device.
3. If it is necessary for you to use an adapter such as our item No.1160, make sure that you use a MONO adapter, not a STEREO adapter.
4. Make sure that the connection between the Weeble Switch and your toy/device is tight. There should be no gaps.
5. Simply press or move the Weeble figure, to activate your toy/device.
6. The toy/device will only remain activated while the Weeble Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

### **Troubleshooting:**

**Problem:** The Weeble Switch has no Vibration.

**Action #1:** Check N-Cell battery for strength and for proper battery polarity. Replace if weak or dead.

**Action # 2:** Make sure nothing is preventing or blocking the Weeble Switch from being depressed.

**Problem:** Weeble Switch does not activate a toy or device.

**Action # 1:** Make sure that the connection between the Weeble Switch and your toy/device is tight. There should be *no* gaps. This is a common error and an easy fix.

**Action # 2:** Check batteries in toy/device, replace if weak or dead.

**Action # 3:** If adapters are being used they must be Mono, stereo adapters will not work.

**Action #4:** Try your toy or device with another switch you know works to rule it out as the source of the problem.

### **Care of the Unit:**

The Weeble Switch can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.