

Other Popular Toys:

Pouring Cup #20
Ring Around Bells #23
Dome Alone #69
Dome Alone with Switch #71
Mini Dome #72
Drum #80
Musical Rolling Pin #160
Stacking Blocks #359
Stacking Ring Cone #360
Musical Top #400
Vibrating Light #458
Vibrating Light with Music #459
Glitter Roll #696
Motorized Glitter Roll #697
Butterfly Light and Music Puzzle #922

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

Musical Light Box - #200

USER'S GUIDE


Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030
www.enablingdevices.com

When activated by any of our external capability switches, this multi-purpose musical light box can be used as a backlight for tracing or as a light source for people with visual impairments.

Operation:

1. The Musical Light Box requires two-D size batteries. Alkaline batteries are required (Duracell or Energizer brands). Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery holder is located under the unit. When installing new batteries, always be careful to observe proper battery polarity.
3. Connect the unit to any external capability switch via the jack, located on the back of the unit. The Musical Light Box #200 is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug.
4. Make sure that the connections between the external capability switch and the adapter AND the adapter and the jack on the Musical Light Box are tight. There should be no gaps.
5. Activate the external capability switch to light up the box and begin the music.
6. The light and music will only remain on while the external switch continues to be activated. Once you release the switch, the light and music will go off.

Troubleshooting:

Problem: The lights and/or music do not turn on, or are not operating at full strength.

Action #1: Replace the batteries, paying close attention to proper battery polarity.

Action #2: Make sure that the connections between the switch and the adapter AND the adapter and the jack are tight.

Problem: A light bulb burns out.

Action: Remove the large, rectangular, opaque cover by gently pulling up on it to release the Velcro hold. Unscrew the light bulb and replace it with a 2.47-volt bulb. Replace the cover.

Note: If you cannot purchase this bulb from your local hardware store, call our Technical Service Department at 1-800-832-8697 for a replacement.

Care of Unit:

The Musical Light Box can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.