
Deluxe Fantastik Fan - #142

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030
www.enablingdevices.com

A portable fan that cools you down while entertaining you. Size: 8.25"L x 6.5"W x 15"H. Requires Capability Switch, 4 C Batteries and 2 Watch Cell Batteries (LR-44 Watch Cell Batteries Included).

Operation:

1. Carefully turn unit over to reveal battery compartment. Remove the small Phillips head screws and open the battery compartment door. Insert four "C" batteries into the holder. Be careful to check for polarity, matching positive pole to positive marking and negative pole to negative marking in the battery holder. Alkaline batteries are recommended because they last longer. Close battery compartment door and replace screws.

Please Note: The ON/OFF switch has to be set in the ON position, when using an external capability switch. **This fan will only work through the use of an external capability switch. Normal function has been disabled due to switch adaptation.**

2. Plug your external capability switch into the 1/8" female jack located on the back of the fan. Make sure the switch plug is pressed firmly into the jack on the fan, there should be no gaps. You can now actuate this fan with your switch.
3. The fan will only remain on while your switch is activated, once you release your switch the fan will shut off. The LED lights will light up only when the fan blades turn, once the fan slows down to a certain speed the LED lights will turn off.

Please Note: There is a push button ON/OFF switch for the LED lights; located on the fan blades base. You can run this fan with or without the lights with this switch.

4. To replace the batteries for the fan blade's LED lights, you must turn the center disk on the fan blade base. The round cover will come off. Next using a small flathead screwdriver, pop the two small watch size batteries out. Replace with new batteries (LR44) with the + & - sides of each battery facing according to the indicator marks on the fan blade base. Replace cover.

Troubleshooting:

If the unit fails to operate, or operates incorrectly, the following steps should be performed:

- Replace the batteries.
- Check the connections to the switch and/or device, making certain that they are securely in place. Make sure the switch plug is pressed firmly into the jack on the fan.

Care of Unit:

The **Deluxe Fantastik Fan** can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.