
Air-tivity Ball Popper #157

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030
www.enablingdevices.com

Magically powered by air!

It's poppin', droppin' air-powered fun! Watch the colorful balls pop up and then follow them down the track. The balls go around over and over again. Hear silly sound effects and 8 lively songs. The Air Toy is an "air-mazing" experience! Size: 15"L x 9"W x 16"H. Requires 4 D Batteries & external capability switch (Not included).

Operation:

1. The Air-tivity requires four D batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the back of the unit. To remove the battery compartment cover, unscrew the small Phillips Head screw, then slide the cover back and then off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace cover and screw.
3. Turn the ON/OFF switch located on the back of the unit to the ON position. Connect the unit to any external capability switch via the 1/8" jack, located on the back of the unit. If you need to use a 1/4 " to 1/8" adapter for your switch, it must be a mono adapter, not stereo.
4. Make sure that the connections between the external capability switch and the adapter (if applicable) and the jack on the Air-tivity are tight. There should be no gaps.
5. Load the supplied balls into the ball slid. Begin play by activating your external capability switch. Pressing your switch once and releasing it, will start the balls popping up into the clear dome and rolling down the track, while simultaneously playing silly sound effects and up to eight different lively songs. The Ball Popper will keep activating between approximately 20 to 40 seconds depending on the song that is playing.

Troubleshooting:

Problem: The Air-tivity does not work.

Action #1: Check or replace the four D batteries with fresh new batteries. Never mix different brands or old and new batteries.

Action #2: Make sure the Air-tivity is on a flat level surface and that nothing is restricting any of the balls. Use only the balls included with Air-tivity, other balls will not work with this product.

Action #3: Try a different switch that you know works with other toys/devices to rule out the Air-tivity as the source of the problem.

Care of Unit:

The Air-tivity can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.