

## Some Other Popular Toys

Pouring Cup #20  
Ring Around Bells #23  
Dome Alone #69  
Dome Alone with Switch #71  
Drum #80  
Musical Rolling Pin #160  
Musical Light Box #200  
Stacking Blocks #359  
Stacking Ring Cone #360  
Musical Top #400  
Vibrating Light with Music #459  
Glitter Roll #696  
Motorized Glitter Roll #697  
Butterfly Light and Music Puzzle #922  
Traffic Light #1800

---

### **Enabling Devices, Inc.**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Telephone 914-478-0960 - Fax 914-478-7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

---

# String Thing with Lights

---

## Catalog #490-L

### User's Guide

**Enabling Devices, Inc.**  
Hastings-on-Hudson, NY 10706  
[www.enablingdevices.com](http://www.enablingdevices.com)

---

## String Thing with Lights

---

### Operation:

1. The String Thing requires 4AA batteries (Not included). To install new batteries, first turn the String Thing over. Next simply unscrew the Philips screw on the case and, lift the battery off. Insert new batteries being sure to observe proper (+) & (-) polarity. Close cover and replace screw.
2. Set the String thing in either the Black-light or String position.
3. Plug your external capability switch into the female jack located on the side of the String Thing. When your switch is pressed, the String Thing will activate. Once you release your switch, the String Thing will turn off. The String Thing can be used in or out of the display base.

### Please Note:

**Due to switch adaptation the String thing will only work with an external switch. It will no longer work by the use of the built-in ON/OFF switch.**

**During operation if the string gets tangled or is stopped by the user pulling on it, it will stop as a safety feature to prevent burning out the motor.**

### Troubleshooting:

**Problem:** The String Thing does not turn on when switch is depressed.

**Action #1:** Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection. Also the String & Blacklight/String/Off switch needs to be in the String or Blacklight & String position to work with a switch.

**Action #2:** Make sure batteries are fresh.

**Action #3:** Try a different switch with the String Thing to rule it out as the source of the problem.

### Care of Unit:

The String Thing can be wiped clean with any household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit in any fluids, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.

### For Technical Support:

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com