
Gum Ball Switches #782R, B, G, Y, P

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030
www.enablingdevices.com

A high quality and dependable switch. Meets most needs of switch users. It features a 2½ inch activation surface and is recommended for all who can access a smaller target area. Provides extraordinary tactile and audible feedback. Base has three holes for easy mounting. We have also made the mounting plate detachable since many users do not need the plate. Available in 5 colors. Size: 3¼" Base x ¾" High.

Operation:

1. The Gum Ball Switch does **not** require any batteries to operate.
2. The Gum Ball Switches come with a removable base. To remove the base turn the switch over and unscrew the two Phillips Head screws. Next pull the base ring off the switch.
3. Plug the Gum Ball Switch into the jack on your switch-adapted toy/device.
4. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
5. Make sure that the connection between the Gum Ball Switch and your toy/device is tight. There should be no gaps.
6. Simply press anywhere on the Gum Ball Switch's colored top to activate your toy/device.
7. The toy/device will only remain activated while the Gum Ball Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

Troubleshooting:

Problem: The Gum Ball Switch does not activate your toy/device.

Action #1: Make sure that the connection between the Gum Ball Switch and your toy/device is tight. There should be **no** gaps. This is a common error and an easy fix.

Action #2: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #3: Try a different adapter (if applicable) to rule this out as the source of the problem.

Care of Unit:

The Gum Ball Switch can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.