
Clip Fan #149

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030

www.enablingdevices.com

Comes on a flexible gooseneck! Clip-on design allows mounting anywhere. Size: 4¼"L x 5"W x 7½"H. Requires Capability Switch, 2 AA Batteries and 2 CR2032 Batteries (CR2032 Batteries included).

Operation:

1. The Clip Fan requires 2 AA batteries to operate (Not included) and 2 CR2032 Lithium Cell batteries. For fan lights (included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn the fan over to face the black battery compartment cover. Carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and lift the cover off, it may be necessary to use the end of the screwdriver to lift one edge of the cover. Observing proper (+) & (-) battery polarity, install 2 AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Turn the push button ON/OFF switch on the fan blades to ON. This will activate the LED lights.
4. Plug your switch into the Clip Fan's jack. Make sure that the connection between your switch and the Clip Fan is tight. There should be no gaps. Set the ON/OFF switch to OFF for external switch use. The Clip Fan will also work without an external switch normally through its ON/OFF switch.
5. Activate your switch and the fan will spin and the LED lights will change patterns as long as your switch is activated. Once you release your switch the fan will slow down and stop.

6. To replace the batteries for the fan blade's LED lights, you must first remove the fan from the motor base. Carefully pull the round blade holder away from the motor base. Next using a small Phillips Head screwdriver, remove the two screws from the back cover. Lift the back cover off. Replace with 2 CR2032 Lithium Cell batteries following the + & - indicators in the holder. Replace cover and screws.

Please Note: When finished using turn off the LED lights to prevent the batteries from going dead. For prolonged storage we recommend removing the batteries.

Troubleshooting:

Problem: The Light Locator switch does not activate your toy/device.

Action #1: Make sure that the connection between the Light Locator switch and your toy/device is tight. There should be *no* gaps. This is a common error and an easy fix.

Action #2: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #3: Try a different adapter (if applicable) to rule this out as the source of the problem.

Care of Unit:

The Clip Fan can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.