

**Following is a sampling of popular Play Station games that have been tested and are known to be compatible with our adapted Play Station Controller:**

1. Need for Speed V Rally
2. Need for Speed – 2
3. Need for Speed - Hot Pursuit 2
4. Dare Devil
5. Formula 1 '98
6. Gran Turismo 1, 2, and 3
7. Rally Cross
8. Rally Cross 2
9. Die Hard Trilogy
10. Twisted Metal
11. Twisted Metal 3
12. Cool Boarders
13. NBA Live '99
14. NCAA Final Four 2001
15. Area 51
16. Newman Haas Racing
17. Arctic Thunder Snowmobiling
18. SSX Snow Boarding
19. WDL Thunder Tanks
20. Midnight Club Street Racing
21. Grand Theft Auto 3
22. Burnout
23. World Tour Soccer
24. Sky Odyssey
25. NASCAR Race For The Cup 2005

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---

---

---

## **PlayStation Control Center- #4037**

---

---

### **USER'S GUIDE**

  
**Enabling Devices**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030

[www.enablingdevices.com](http://www.enablingdevices.com)

Drop your favorite game disk into your PlayStation and plug in the controller on our special control system panel to your PlayStation port. Now any user can independently play the game by pushing on one of four positions on each of the two yellow disks. Disks operate with the slightest touch and can be used by one or two players. Our control system panel is also adapted to take up to 9 capability switches which control 9 different game functions. Our control center works with PlayStation and PlayStation 2. Requires 2 AA Batteries Size: 18"L x 11"W x 4"H.

### Operation:

1. The PlayStation requires two AA batteries. The battery compartment is located under the base of the unit. Carefully turn the switch over, and then remove the battery cover with a small Philips screwdriver. Install new batteries, being careful to observe proper battery polarity. Alkaline batteries are recommended because they last longer.
2. Plug the PlayStation controller into the port you would normally plug in your analog controller. Drop your favorite game into PlayStation and press the start button on the control center.
3. The two round control disks will give you the same controlling movements as the direction pad and direction buttons on the Turbo Shock 2 controller. Direction movement and functions are marked on the disks. **Please Note:** The control center cannot be used with the few games that require the left analog control stick on the turbo shock 2 controller.
4. To use the control center with external capability switches (sold separately). Plug your switch or switches into the jacks located on the back of the control center.
5. Make sure that you have TIGHT connections between your switches(s), and the control center. There should be no gaps. The use of switches with the control center will allow the same control as the disks, or limit the movement or controls for users who have a more limited ability. A parent, teacher, therapist or care giver can assist in controlling the game with the user, through the use of the control disks or external switches.

**Please Note:** The light on Program button, which is located on top of the controller, must be **off** for our unit to work properly.

### Recommended Games:

Please check our website for more game updates at [www.enablingdevices.com](http://www.enablingdevices.com) once on the site enter the PlayStation Control Center No.4037 in the search box and hit go. This will bring you to the products page with the latest information.

### Troubleshooting:

**Problem:** The PlayStation control center does not activate your PlayStation™.

**Action #1:** Make sure that the connection between the control center, PlayStation and your switches (if applicable) are tight. There should be **no** gaps. This is a common error and an easy fix.

**Action # 2** Make sure the batteries are in the battery compartment properly, and making good contact. Replace if weak or dead.

**Action 3:** Try a different switch with your control center (if applicable) to rule out this as the source of the problem.

**Action #4:** Check that no debris or small objects are blocking or obstruction any of the buttons or control disks on the control center.

**Problem:** Left control disc or corresponding jacks (if applicable) do not function.

**Action:** Check batteries for proper installation and strength. If weak or dead replace.

### Care of Unit:

The PlayStation Control Center can be wiped clean with any mild household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.