

---

---

## Cosmic Steering Wheel #779

---

---

### USER'S GUIDE

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---

  
**Enabling Devices**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

Brighten the day with lively entertainment!

Spin the wheel and stars and sparkles fly magically in the dome while music plays and bright lights shine. This is a spectacular cause and effect toy, which will encourage even the most challenged child to reach out to activate the lively show. Size: 15"W x 11"H. Requires 4 C and 4 AA Batteries.

#### Operation:

1. The Cosmic Steering Wheel requires four "C" size batteries and four AA batteries, alkaline batteries Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types of batteries together.
2. The battery compartments are located on the underside of the unit. To access the compartments, simply remove the Velcro strips (for C batteries only). Install the batteries paying careful attention to proper (+) and (-) polarity. Replace the Velcro strips.
3. To install the AA batteries remove the small Phillips head screw on the top of the black battery case, located on the underside of the unit. Install the batteries paying careful attention to proper (+) & (-) polarity. Replace cover and screw.
4. To activate the toy, move the steering wheel either left or right. Enjoy the effects as the sequins flutter all about accompanied by music, light and vibration.
5. Once you stop moving the Cosmic Steering Wheel After a brief delay, the lights, music and vibration will stop.

#### Troubleshooting:

Problem: The music and/or the lights are not functioning, as they should.

Action: Check that all batteries are installed properly and are fresh.

Problem: The sequins are not fluttering and/or there is no vibration.

Action: One or more of the batteries that controls the sequins and vibration is weak, dead or installed incorrectly. Check these six batteries and replace them if need be, paying close attention to proper (+) and (-) battery polarity.

#### Care of Unit:

The Cosmic Steering Wheel can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

- Do not submerge the unit, as this will damage the contents and the electrical components.
- Do not use abrasive cleaners, as they will scratch the surface of the unit.