

---

---

## **Pink Poodle #936**

---

---

## **USER'S GUIDE**



**Enabling Devices**

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

---

**For Technical Support:**

Call our Technical Service Department

Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-TEC-TOYS or 1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

### *Woof, Woof!*

Take your baby poodle for a walk by activating your capability switch and it will move about forward and backwards raising its head and making cute barking sounds. Size: 5½"L x 6 ½ x "W x 3"H. Requires 2 AA Batteries.

#### **Operation:**

1. Pink Poodle requires 2 AA Batteries to operate. Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. Turn Pink Poodle upside down to reveal the battery compartment. Remove the small screw with a Phillips Head screwdriver. Install 2 AA batteries paying close attention to proper battery polarity. Replace the battery compartment cover and screw.
3. Connect Pink Poodle to any external capability switch (not included) via the jack located at the end of Pink Poodle's cord. Pink Poodle is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to have a tight connection. There should be no gaps.
4. Actuate your external capability switch and Pink Poodle will spring to life! She will walk forward; raise her head, bark and then backup.
5. Pink Poodle will remain on while the external capability switch continues to be actuated. Once you release the external capability switch, there will be a brief delay, and then Pink Poodle will turn off.

#### **Troubleshooting:**

**Problem:** Pink Poodle does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper (+) & (-) battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

#### **Care of Unit:**

- Do not inhibit Pink Poodle's movement, as this may cause irreversible damage.
- Do not lift Pink Poodle up by her head, tail or legs, or drop Pink Poodle.
- If you will not be using Pink Poodle for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Pink Poodle is surface washable only.