

Magnetic base sticks to file cabinets, refrigerators, and school lockers.
Size: 4"L x 4"W x 3.75"H. Requires Capability Switch, 2 AA Batteries
and 2 Watch Cell Batteries (LR-44 Watch Cell Batteries Included).

OPERATION:

1. Carefully turn unit over to reveal battery compartment. Remove the small Phillips head screw and open the battery compartment door. Insert two "AA" batteries into the holder. Be careful to check for polarity, matching positive pole to positive marking and negative pole to negative marking in the battery holder. Alkaline batteries are recommended because they last longer. Close battery compartment door and replace screw.

Please Note: The ON/OFF switch has been locked in the ON position; it will only work through the use of an external capability switch.

2. Plug your external capability switch into the 1/8" female jack located on the side of the fan. Make sure the switch plug is pressed firmly into the jack on the fan, there should be no gaps. You can now actuate this fan with your switch.

3. The fan will only remain on while your switch is activated, once you release your switch the fan will shut off. The LED lights will light up only when the fan blades turn, once the fan slows down to a certain speed, the LED lights will turn off.

Please Note: There is no ON/OFF switch for the LED lights; they only use battery power when the fan blades move.

4. To replace the batteries for the fan blade's LED lights, you must first remove the fan from the motor base. Carefully pull the round blade holder away from the motor base. Next using a small Phillips Head screwdriver, remove the two screws. Lift the back cover off. Carefully lift the small electronic board up, but do not remove there is a wire harness attaching it to the base. On each side of the round batteries are short metal tabs, bend the outside tab up on each battery holder then slid the battery out from that side. Replace with new batteries with the + side facing up. Bend tabs back down and replace cover and screws.

Troubleshooting:

If the unit fails to operate, or operates incorrectly, the following steps should be performed:

- Replace the batteries.
- Check the connections to the switch and/or device, making certain that they are securely in place. Make sure the switch plug is pressed firmly into the jack on the fan.

Care of Unit:

The Magnetic Fantastik Fan can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

Other Popular Fans:

Desk Fan #121

3 D Foam Fans #126

Folding Fan #125 (unadapted)

Deluxe Folding Fan #127

Enabling Devices, Inc.
385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Telephone 914-478-0960 – Fax 914-478-7030
www.enablingdevices.com

ENABLING DEVICES, INC.

385 Warburton Avenue
Hastings-on-Hudson, NY 10706

Magnetic Fantastik Fan

No.141

User's Guide

www.enablingdevices.com