
Clowning Around #661

USER'S GUIDE



Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030

www.enablingdevices.com

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

It's circus time!

The slightest touch on the green bumpy plate makes the clown's arms and legs swing delightfully while one of seven exciting high quality circus songs plays for 15 seconds. It's a wonderful tactile experience as well. Feel the textured plate and bead chains vibrate, watch the multi-colored blinking lights dance about, and touch his soft felt. Toy also has a switch input to activate the music (only). Size: 15"H x 11"D x 10"W. Requires 4 AA and 4 AAA Batteries.

Operation:

1. Clowning Around requires four AA & four AAA batteries (Not included). The battery compartments are located under the base of the unit. Carefully turn the unit over, and then remove the Philips head screws from the battery covers. Install new batteries, being careful to observe proper battery polarity. Alkaline batteries must be used only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old, new or different types of batteries together. Replace the battery compartment covers and screws.
2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level.
3. Press the green textured plate to make the clowns arms and legs swing delightfully while one of seven exciting high quality circus songs play... It's a wonderful tactile experience as well. Feel the textured plate and bead chains vibrate, watch the multi-colored blinking lights dance about. Each song will play for approximately 15 seconds.
4. There is also a 1/8" switch input jack for using your own external switch. Make sure the male switch plug is pressed firmly into the jack on the Clowning Around, there should be not gaps. Please Note: External switch use will not make the clown's arms and legs move. It will only control the lights, music & vibration.

Troubleshooting:

Problem: Clowning Around has no lights, Music or Vibration.

Action #1: Check all batteries for strength and for proper battery polarity. Replace if weak or dead.

Action # 2: Make sure nothing is preventing or blocking the green textured plate from moving freely.

Problem: Clowning Around does not work with a switch.

Action # 1: Make sure all connections are tight.

Action # 2: If adapter is used it must be Mono, stereo adapters will not work.

Action #3: Try your switch with another device you know works to rule the Clowning Around as the source of the problem.

Care of the Unit:

Clowning Around can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.