

---

---

## **Bouncy Bunny- #3816**

---

---

### **USER'S GUIDE**

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---



**Enabling Devices**

385 Warburton Avenue  
Hastings on Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

*Hop, hop, hop!*

Attach your capability switch or squeeze his left paw and Bounce Bunny will sing the Hop Hop song for you and hop in place. He is just adorable to play with. Size: 9"L x 4"W x 11"H. Requires 3 AA Batteries.

**Operation:**

1. Bouncy Bunny requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located in Bouncy Bunny's back. Open the Velcro flap, remove the battery cover and install 3AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover. Turn the ON/OFF switch to ON, which is located the above the battery compartment.
4. Connect Bouncy Bunny to any external capability switch (not included) via the jack located at the end of his cord. Bouncy Bunny is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have a tight connection. There should be no gaps.
5. Use any capability switch or squeeze his left paw to get Bounce Bunny hopping and singing. At the end of each verse the Bounce Bunny will hop in place. The song lasts for 45 Seconds but you can stop it any time by hitting your switch or squeezing his paw. The song always returns to the beginning when you turn him off.

6. When you are finished using Bouncy Bunny turn his ON/OFF switch to the OFF position.

**Troubleshooting:**

**Problem:** Bouncy Bunny does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

**Care of Unit:**

If you will not be using Bouncy Bunny for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Bouncy Bunny is surface washable only.