

## Features

- Audio Formats supported: MP3 (up to 320 Kbps with Variable Bit Rate) and PCM WAV format
- Blue LED trim effect around play/pause button
- Dual headphone jacks for two listeners
- USB 2.0 High Speed Device operation
- Standard SD slot for external memory cards (no embedded memory)
- Shaking action enables function to skip to next random song.
- Runs off of AAA battery.

## Package Contents

- Sansa Shaker Player
- SD Card (in unit)
- Earphones (1 pair)
- USB Cable
- CD with User's Manual
- Stickers
- Quick Start Guide
- 1 AAA-battery
- Carabiner Clip On Accessory

## Minimum System Requirements

- Windows XP
- Windows Media Player 10
- CD-ROM drive
- USB 2.0 port required for hi-speed transfer

## Location of Controls

### 1 Built-in Speaker

Music will play through the built-in speaker when an earphone is not inserted.

### 2 Top Twist - Volume

Turn up or down the volume.

### 3 Dual Headphone Jacks

Insert earphone here for private listening. Once an earphone is inserted, the external speaker will be disabled.

### 4 Strap Eyelet

Insert Carabiner loop here.

### 5 Power/Play/Pause Button

Turn on or off the Sansa Shaker as well as to play or pause the music. The Power/Play/Pause button also helps initiate the Shake feature.

### 6 Rewind/Forward

Skip to the next track or return to beginning of the previous track; turn to the left or right then hold it to fast forward or rewind the current song.

### 7 Bottom Cap

Open the cap to insert SD card, replace battery, or connect the Sansa Shaker to the computer.

### 8 USB Connect Port



Insert the USB cable here to connect the Sansa Shaker to the computer.

### 9 SD Card Slot

Insert the SD card here.

### 10 Battery Cover

Insert an AAA battery here.

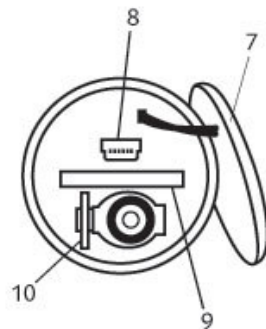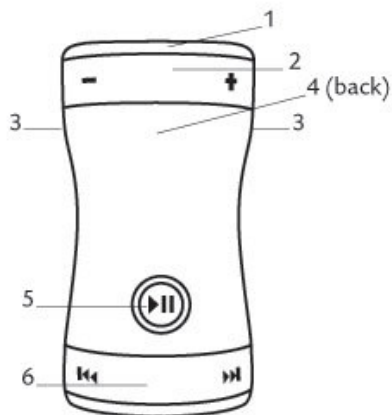

# MP3 Player #595

## USER'S GUIDE

### For Technical Support:

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

  
**Enabling Devices**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

Holds up to 125 songs!

The Sansa Shaker is an easy to use and fun MP3 Player. We have adapted it by adding two jacks. You can use one capability switch to turn the unit on or off or pause and a second switch to advance. It has a built-in speaker or ear buds for listening to 10 hours of your music. Ear buds, USB Cable and 512 MB SD Card are included. Size: 2 3/4"H x 1 1/2"D. Requires 1 AAA Battery.

### Operation:


1. The MP3 Player requires 1 "AAA" battery (included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Follow the illustrations below for installing the AAA battery, making sure to follow proper (+) & (-) battery polarity. Replace cover.

2.

1) Twist open the Sansa Shaker™ cap at the bottom.  
*Note: Insert the Negative (-) end first.*



2) Open the Bottom Cap  
3) Open the battery cover  
4) Insert the new battery  
*Note: Insert the Negative (-) end first.*

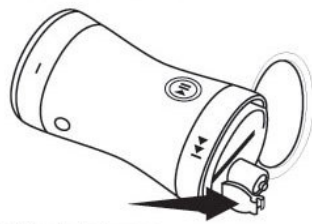

5) Close the battery cover  
*Note: There should be a click sound when battery cover is closed properly.*

2. We adapted the MP3 player by adding two 1/8" cord jacks. One is used to turn the unit On/Off or it can be used to Pause the Track. The second cord jack is used to advances the Track.
3. Plug your Earphones into one of the two jacks marked "Headphones" for private listing. Once Earphones are inserted the external speaker will be disabled. Adjust the Volume to an audible level. To turn up the Volume, turn the Top Twist to the right. To turn the volume up fast, turn the Top Twist to the right and hold it.
4. There are two adapted switch input cord jacks on the unit. One is marked On/Off the other, Track/Advance. Insert any capability switch with a 1/8" plug into the On/Off input jack. Make sure the connection is flush with no gaps. Please Note: Switches with Latch/Timer modes can only be used in Momentary mode with this MP3 player. Latch/Timer functions will not work.
5. To turn on the MP3 Player, press and hold your switch, or pressing the Power/Pause/Play button for approximately 2 seconds or until you hear a 'Drum Roll Up' sound.
6. To turn Off the MP3 Player, press and hold your switch or the Power/Play/Pause button for approximately 5 seconds or until hear a short 'Drum Roll Down' sound.

7. To Pause, press or switch or the Power/Play/Pause button once. The LCD will blink twice approximately every 3 seconds while the music is paused. The player will turn off automatically after approximately 3 minutes in pause.
8. Skipping Track to skip to the next song, Press your switch plugged into the Track/Advance once or turning the Bottom Twist to the right. To fast forward the current song, Press and hold your switch or turn the Bottom Twist to the right and hold it.
9. Please refer the manufactures instructions for information on the MP3 Player's Additional functions and features.

### Tips, FAQ, and Troubleshooting:

**Question:** What audio format does the MP3 Player support?

**Answer:** Supports MP3 and PCM WAV formats.

**Question:** I can't turn on my MP3 Player. Nothing happens when I press and hold the Power/Play/Pause Button for more than 2seconds. Why?

**Answer:** The battery is either not inserted or needs to be replaced. To check if the battery is present, open the MP3 Player Cap then open the Battery Cover. Insert a fresh AAA battery and try to power on again.

**Question:** What will happen if I pull the SD card out while the music is playing?

**Answer:** You will hear an 'uh-oh' sound. The music will play when you re-insert the SD card.

**Question:** What bit-rates does the MP3 Player support?

**Answer:** The MP3 Player supports MP3 format with variable bit-rate up to 320 Kbps.

**Question:** Can the MP3 Player play without an SD card?

**Answer:** No, you need to insert an SD card with music files loaded.

**Question:** Does the MP3 Player support SDHC cards?

**Answer:** The MP3 Player will support SD cards up to 2Gbytes in capacity. It does not support SDHC cards at this time.

**Question:** How can I tell if the battery in my MP3 Player is low?

**Answer:** When the MP3 Player is playing or idle, and the battery level is low, the UH-OH sound will play first before SHUTDOWN sound will be heard and device will blink 5 times then shut off.