

---

---

## Siberian Husky #8049

---

---

## USER'S GUIDE

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com

---



**Enabling Devices**

385 Warburton Avenue  
Hastings-on-Hudson, NY 10706  
Tel. 914.478.0960 / Fax 914.478.7030  
[www.enablingdevices.com](http://www.enablingdevices.com)

*Your friendly companion!*

He walks, barks, and wags his tail. Just connect your own capability switch and off he goes. Size: 4"L x 10"W x 10"H. Requires 2 C Batteries.

**Operation:**

1. Siberian Husky requires 2 C Batteries to operate. Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. Turn Siberian Husky upside down to reveal the battery compartment. Open battery compartment and install 2 C batteries paying close attention to proper battery polarity. Close the battery compartment.
3. Connect Siberian Husky to any external capability switch (not included) via the jack located at the end of Siberian Husky's cord. Siberian Husky is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to have a tight connection. There should be no gaps.
4. Actuate your external capability switch and Siberian Husky will spring to life! He will walk, barks, and wags his tail.
5. Siberian Husky will remain on while the external capability switch continues to be actuated. Once you release the external capability switch, there will be a brief delay, and then Siberian Husky will turn off. If you would like the Siberian Husky to stay in place, we have included two self adhesive non skid discs which can be placed on the bottom of his rear feet. Using these discs will keep him in place during use. This is great for lap tray or tabletop play.

**Troubleshooting:**

**Problem:** Siberian Husky does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper (+) & (-) battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

**Care of Unit:**

- Do not inhibit Siberian Husky's movement, as this may cause irreversible damage.
- Do not lift Siberian Husky up by his head, tail, legs, or drop Siberian Husky.
- If you will not be using Siberian Husky for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Siberian Husky is surface washable only.