
Parrot & Penguin Fans #171 & 172

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030
www.enablingdevices.com

Take a trip to the jungle or the Arctic!

Add your capability switch and enjoy these fans' neon light show and the multi-colored blinking LED lights in a jungle or arctic setting. The fan blades are soft and safe for all ages. Size: 9"R x 7 ½ "H. Requires 3 AAA Batteries.

Operation:

1. Fans require 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located under fan's base. Carefully turn the fan over to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover screw and install 3 AA batteries, paying close attention to proper (+) and (-) battery polarity.
3. Replace the battery compartment cover and secure with the screw. Connect to any external capability switch (not included) via the jack located at the back of the fan's base. The fan is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have a tight connection. There should be no gaps.
4. The Fan can be used with or without an external switch. The ON/OFF switch is located in the bottom of the base unit. When using an external capability switch, the ON/OFF switch needs to be set in the ON position. Actuate your external capability switch and the fan and LED lights will start! Once you release your switch the fan will stop. When you unplug your switch the fan will run until you turn the ON/OFF switch to OFF. This also allows you to use the fan without an external switch for continuous play.
5. When finished playing with the fan, set the ON/OFF switch to OFF to prevent battery drain.

Troubleshooting:

Problem: Fan does not function correctly.

Action #1: Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

Action #2: Replace the batteries paying close attention to proper (+) and (-) battery polarity.

Action #3: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #4: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using the fan for an extended amount of time, we recommend removing the batteries.

The fan's base can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner. The plush Parrot or Penguin are surface cleanable only.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.