
Dumbo Bubbles #2290

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com



Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030
www.enablingdevices.com

Gazillion bubbles included!

Activate your capability switch and watch adorable Dumbo blow a stream of colorful bubbles from his trunk. Size: 5 1/2" L x 7 1/2"W x 8" H. Requires 3 AA Batteries.

Operation:

1. Dumbo Bubbles requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located under Dumbo. Carefully turn Dumbo over to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover screw and install 3 AA batteries, paying close attention to proper (+) and (-) battery polarity. Replace the battery compartment cover and secure with the screw.
3. Pour the included Bubble Solution into Dumbo's Bucket up to the fill line.
4. Connect Dumbo to any external capability switch (not included) via the jack located on Dumbo's back. Dumbo is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have a tight connection. There should be no gaps.
5. Dumbo can be used with or without an external switch. When using an external capability switch, set the ON/OFF switch to OFF. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.
6. To use without an external switch, turn Dumbo's ON/OFF switch to ON. Watch "Dumbo" start blowing bubbles.
7. When finished playing with Dumbo turn OFF to prevent battery drain.

Troubleshooting:

Problem: Dumbo does not function correctly.

Action #1: Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

Action #2: Replace the batteries paying close attention to proper (+) and (-) battery polarity.

Action # 3: Make sure you have enough Bubble solution in the Bucket.

Action #4: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #5: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Dumbo for an extended amount of time, we recommend removing the batteries.

Dumbo can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.