

---

---

**Shelly Seahorse- #4084 #4084U**

---

---

**USER'S GUIDE**



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

---

**For Technical Support:**

Call our Technical Service Department

Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-TEC-TOYS or 1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

### *Soothing to the senses!*

Activate your capability switch or press her fin and Shelly Seahorse plays uplifting calypso music while her belly glows with ever-changing colors. Size: 4"L x 3"W x 12"H. Requires 3 AAA Batteries. Weight: ½ lb.

#### **Operation:**

1. Shelly Seahorse requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located in the Velcro pocket behind Shelly Seahorse's back fin. Open the flap then, using a Phillips head screwdriver open and remove the batter cover. Next install 3 AAA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. Set the ON/OFF switch to ON.
4. Connect Shelly Seahorse to any external capability switch (not included) via the jack located at the end of her cord. Shelly Seahorse is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to plug your switch all the way in. There should be no gaps.
5. Actuate your external capability switch or press the musical note on Shelly Seahorse's back fin, once and uplifting calypso music while her belly glows with ever-changing colors Press your switch or musical note a second time and Shelly Seahorse will turn OFF. With each activation Shelly Seahorse will play for approximately one minute before shutting OFF.

6. When finished using Shelly Seahorse turn her ON/OFF switch to off to prevent false activations and to prevent battery drain.

#### **Troubleshooting:**

**Problem:** Shelly Seahorse does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is pushed in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

#### **Care of Unit:**

If you will not be using Shelly Seahorse for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Shelly Seahorse is surface washable only.