
Rainbow in My Room #332

USER'S GUIDE

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030
www.enablingdevices.com

Colors of a real rainbow! Activate your capability switch to put a magical rainbow on your wall or ceiling and transform your room into a wonderland day or night. Size: 9"L x 4½"W x 4¾"H. Requires Capability Switch and 4 AAA Batteries.

Operation:

1. Rainbow in My Room requires 4 AAA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly.
2. To install the batteries, carefully turn the unit over to reveal the battery compartment cover. Using a Phillips head screwdriver remove the battery cover screw and cover, next install four AAA batteries into the compartment. Please note to follow proper (+) & (-) battery polarity. Replace cover and screw. See figure 1.

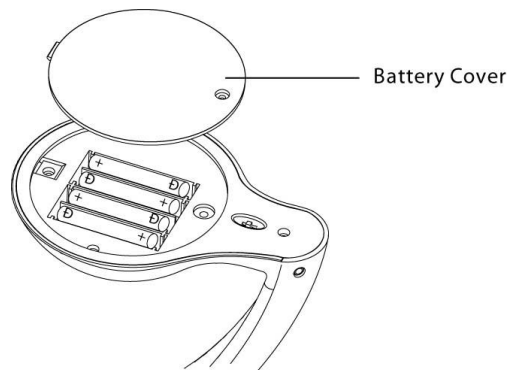


Figure 1.

3. The Rainbow in My Room can only be used with the use of an external capability switch (sold separately).
4. On the bottom of the base, select Mode 1 or Mode 2 (see Fig. 2). Mode 1 turns rainbow on at once. Mode 2 turns rainbow on one color at a time. In modes 1 or 2, the sensor is always drawing a small amount of power. To prolong battery life switch to OFF during periods of non-use. Note: If left ON by activating your switch or the use of a Latch/Timer switch, the rainbow will turn off automatically after 10 minutes.

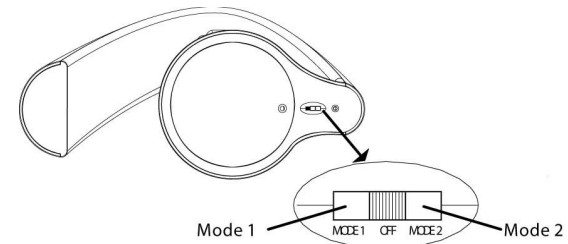


Figure 2.

Switch Use:

5. Plug your external capability switch (Not Included) into the female 1/8" cord jack. Press your switch and it will activate the Rainbow in MY Room as indicated in operation No.4.

Troubleshooting:

Problem: Rainbow in My Room does not turn on when switch is activated.

Action #1: Make sure the Mode switch is set to either Mode 1 or 2.

Action #2: Make sure that you press all connections firmly together. Any gaps will interrupt electrical connection.

Action #3: Make sure batteries are fresh.

Action #4: Try a different switch with Rainbow in My Room to rule it out as the source of the problem.

Care of Unit:

The Rainbow in My Room can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.