

---

# Adapted Musical Crystal Ball #1690

---

## USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

Activate your switch and the dome will rotate and project a moving kaleidoscope of colorful shapes while soothing music plays. Works with or without a capability switch. Size: 3"L x 3"W x 4½"H. Requires 3 AA Batteries. Weight: ½ lb.

### **Operation:**

1. Musical Crystal Ball requires 3 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn the unit to over reveal the battery compartment. Carefully remove the screw from the battery compartment cover, and lift the cover off. Observing proper (+) & (-) battery polarity, install 3 AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set the Musical Crystal Ball to OFF for external switch use via the ON/OFF switch on the bottom of the unit. **Please Note:** The Musical Chrystal can work with or without the use of external switches.
4. Connect Musical Crystal Ball to any external capability switch via the input jack located on the side of the unit. Make sure you plug your switch in all the way. There should be no gaps. Actuate your switch and the dome will rotate and project a moving kaleidoscope of colorful shapes while soothing music plays. Once you release your all will stop. Musical Crystal Ball is equipped with a 1/8" jack. If you need to use a 1/4" to 1/8" adapter use our No.1170 adapter. If purchased elsewhere, it must be a mono adapter, not stereo.

### **Troubleshooting:**

**Problem:** Musical Crystal Ball Machine does not light up and/or there is no music.

**Action #1:** Check the ON/OFF switch

**Action #2:** Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

**Action #3:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

**Action #4:** Make sure that you have your switch plugged in all the way. There should be no gaps.

**Action #5:** Try your external capability switches with another toy/device to rule out the switch as the source of the problem.

### **Care of the Unit:**

The Musical Crystal Ball Machine can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**