
Mini-Shooting Stars #2001-S

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Fantastic for visual attention!

Activate by pressing on the clear top and the stars will shoot all around while the device lights up, plays music and vibrates. Mini-Shooting stars enhances visual attention, sensory awareness and auditory skills. Does not require an external capability switch. Size: 9¼"L x 8¼"W x 5½"H. Requires 2 C Batteries and 1 9-V Battery. Weight: 1¼ lbs.

OPERATION:

1. The Mini-Shooting Stars requires two C batteries and one 9-Volt battery. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located on the underside of the unit. To access the compartment, simply remove the Velcro battery cover. Install the batteries paying careful attention to proper polarity. Replace the battery cover.
3. To activate the toy, simply press anywhere on the clear plastic top.
4. Enjoy the effects as the stars fly all around accompanied by lights, music and vibration.
5. The toy will stop once you release pressure on the clear plastic top.

TROUBLESHOOTING:

Problem: The stars do not fly around and/or the device does not vibrate, as it should.

Action: Replace the two "C" size batteries and make sure to install according to proper polarity.

Problem: The music and/or the lights do not function, as they should.

Action: Replace the 9-Volt battery.

Problem: The device turns on automatically when batteries are installed.

Action #1: Make sure that the batteries are installed completely (i.e. batteries should not be popping out – they should be firmly in place).

Action #2: Make sure that there is nothing causing (a) pressure on the top of the clear plastic top, or (b) the top to be "stuck" down (i.e. spilt beverages that may be sticky, etc.).

CARE OF THE UNIT:

The mini-shooting stars can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as this will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.