



enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com

Desktop Busy Box #3009

USER'S GUIDE

enabling
devices

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Spin and enjoy!

Our wonderful tactile mini-cube provides hours of fun. Spin the busy box and discover different tactile experiences along with multi-colored lights, a mirror, music, and vibration. When you press the red plate, your pre-recorded message plays with 10 seconds of recording time. Size: 7½"L x 7½"W x 5"H. Requires 2 AAA and 3 AA Batteries. Weight: 1½ lbs.

Operation:

1. The Desktop Busy Box requires 2 AAA batteries and 3 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the unit. To access the battery compartments you must first pull off the Velcro attached Lazy Susan. To remove the battery compartment covers for the AA & AAA batteries, unscrew the small Phillips Head screw on the black battery cases, and then slide the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screw. Set the ON/OFF toggle switch to ON.
3. Press the ribbed Orange plate and illuminating LED lights will flash in multi colors.
4. Touch the bumpy Yellow plate or press the textured Blue plate and listen to two different popular child melodies.
5. Press the Red mirrored (mirror is Velcro attached) plate to playback your own pre-recorded message. To record a message, first press and hold the red record button under the Lazy Susan, then while holding the record button press the red plate and speak your message. When finished recording release both. Maximum recording time is 10 seconds.

6. We included a Velcro back removable mirror plate for the red switch. You can leave it off if you desire. See photos on back page of guide.
7. Press the Green button to feel gentle vibration.

Troubleshooting:

Problem: The Desktop Busy Box does not work.

Action #1: Make sure the ON/OFF switch is turned ON.

Action #2: Check all batteries for proper (+) & (-) battery polarity.

Action #3: Check to make sure nothing is blocking or restricting the movement of the activation plates.

Action #4: Replace batteries, new batteries. Never mix different brands, types or old and new batteries.

Care of Unit:

The Busy Box can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

When finished playing with the Busy Box turn the ON/OFF switch to OFF to help prevent battery drain. For prolonged storage we recommend removing the batteries.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.