
G Force #3099

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Gravity defying!

Press the black and orange switch or use your own capability switch to start the three ping pong balls spinning around the dome. The longer you hold down your switch, the higher the balls will climb in the dome until they reach the green center. While the balls are spinning, multi-colored LEDs light up while upbeat music plays. When you release the switch, the balls slowly descend. Great for teaching cause and effect and eye tracking. *Size: 12½"D x 8½"H. Requires 4 C Batteries. Weight: 2¾ lbs.*

Operation:

1. G Force requires four C size batteries Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the unit. To remove the battery compartment covers, unscrew the small Phillips Head screws, and then slide the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Turn the On/Off switch to On.
3. Activate the G Force by depressing the large button switch, or connect the unit to any external capability switch via the jack, located on the side of the unit. G Force is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter, it must be a mono adapter, like our #1170, not stereo.
4. If you are using an external capability switch, make sure that the connections between the external capability switch and the adapter (if applicable) and the jack on the G Force are plugged in all the way. There should be no gaps.

5. Begin play by either activating the large button switch or by activating your own external capability switch to start the three ping pong balls spinning around the dome. The longer you hold down your switch, the higher the balls will climb in the dome until they reach the green center. While the balls are spinning, multi-colored LEDs light up while upbeat music plays. When you release the switch, the balls slowly descend. Great for teaching cause and effect and eye tracking.

Troubleshooting:

Problem: The ping pong balls do not move and no music.

Action #1: Check both sets of batteries for proper installation and freshness.

Action #2: Make sure nothing is blocking or restricting the depressing of the button switch.

Action #3: Try your external capability switch with another toy/device to rule out the switch as the source of the problem.

Problem: The music does not play.

Action #1: Replace the batteries on the right side paying close attention to proper polarity.

Care of Unit:

G Force can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.