
Swirl Art #380

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Fun cause and effect!

Bring out artistic expression! Paint colors can be applied to a spinning blank card creating a kaleidoscope of colorful designs. Fantastic for increasing color recognition and visual attention. Includes 3 paint squirt bottles and a blank sheet to get you started. Size: 11½" x 9¾" x 2¾". Requires Capability Switch and 2 C Batteries. Weight: 1½ lbs.

Operation:

1. The Swirl Art requires 2 C batteries (not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Carefully turn the base over and remove the screw from the battery compartment cover. Lift the battery compartment cover off. Observing polarity, install 2 C size batteries (Not included) into the holder. Replace the battery compartment cover and screw.
3. Plug any capability switch into the 1/8" jack located on the side of the unit, make sure the switch is plugged in all the way. There should be no gaps between the connections, if there is a gap the Swirl Art will stay ON and your switch will have no control over the Swirl Art.
4. Set your ON/OFF switch to OFF for external switch activation. Activating your external switch will start the Swirl Art spinning and stay on for as long as the switch is activated. Once the switch is released Swirl Art will turn OFF. Swirl Art can also be used without an external switch.

Troubleshooting:

Problem: Swirl Art does not function correctly.

Action #1: Make sure that the connection between the external capability switch and the jack is plugged in all the way. There should be NO gaps.

Action #2: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Action #3: Replace the batteries paying close attention to proper battery polarity.

Action #4: Make sure nothing is restricting the paper spinner from moving.

Care of Unit:

If you will not be using Swirl Art for an extended amount of time, we recommend removing the batteries.

The Swirl Art can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.