

---

---

## Bump & Go Train #410

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Fun and excitement for all!***

Just activate your capability switch and the Bump and Go Train will spin about when it hits an object and go in another direction. The train also features an authentic horn sound, smoke from the stack, and a real working headlight. It's excitement for every user. Great for visual tracking. Size: 9"L x 2½"W x 5¼"H. Requires Capability Switch and 4 AA Batteries. Weight: 12 oz.

#### **Operation:**

1. Bump & Go Train requires 4 AA Batteries to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. To install the batteries turn Bump & Go Train over and locate the small screw on the battery cover door at the back of the Train. Using a Phillips head screwdriver open the compartment and install 4 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure with the screw. Connect to any external capability switch (not included) via the cord jack located at the back of Bump & Go Train. Bump & Go Train is equipped with a 1/8" female mono jack for use with external capability switches that have a 1/8" mono plug. Make sure your connections are plugged in all the way. There should be no gaps. Please Note: Due to switch adaption the ON/OFF switch on the Train has been glued in the OFF position. Do not try to remove the glue or move the switch doing so will damage the adaption and void your warranty.
4. Actuate your capability switch and Bump and Go Train will spin about when it hits an object and go in another direction. The Train's Head Light will light up accompanied by Train sounds and smoke from the stack...Once your switch is released all functions will stop.

#### **Troubleshooting:**

**Problem:** Bump & Go Train does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack are plugged in all the way. There should be NO gaps.

**Action #3:** Try your switch\with another switch operated device in an effort to rule out your switch as the source of the problem.

#### **Care of Unit:**

If you will not be using Bump & Go Train for an extended amount of time, we recommend removing the batteries.

Bump & Go Train can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**