
Giggle Gang #5120Z

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Tons of giggles!

The Giggle Gang are soft, plush characters that giggle for 3-5 seconds when you activate your capability switch. The round shape, cuddly softness and touchable textures make them delightful for every child. *Size: 7"W x 5½"H x 3"D. Requires 2 AAA Batteries. Weight: ½ lb.*

Operation:

1. Giggle Gang requires 2 AAA batteries (Not included) to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well.
2. Locate the Velcro closure site on the bottom of Giggle Gang. Open this up to remove the battery compartment. Using a Phillips head screwdriver open the compartment and install 2 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. Set the ON/OFF/Volume selector switch to Low or High. Replace battery compartment back inside Giggle Gang with its speaker facing up. Close up the Velcro attachment site.
4. Connect Giggle Gang to any external capability switch (not included) via the jack located at the end of Giggle Gang's cord. Giggle Gang are equipped with a 1/8" mono jack for use with external capability switches that have a 1/8" mono plug. Make sure you plug your switch all the way in. There should be no gaps.
5. Actuate your external capability switch and Giggle Gang will giggle for 3-5 seconds and then stop.

Troubleshooting:

Problem: Giggle Gang does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is plugged in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Giggle Gang for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Giggle Gang is surface washable only.