
Adjustable Pressure Switch #718-A

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Ideal for those with limited motor abilities!

These handy switches are specially designed for individuals who are unable to control or sustain the hand or wrist movements necessary to operate traditional plate switches. The Mini-Saucer and Saucer Switch are activated with just a light touch. The Adjustable Pressure Saucer Switch allows the user to adjust the pressure from approximately ½ to 32 ounces and has a small LED lamp that glows when the switch is activated. Requires 1 9-V Battery. Weight: ½ lb.

OPERATION:

1. Turn the **Adjustable Pressure Switch** upside down to reveal the setting controls and the battery holder.
2. Slide the battery cover with thumbs to open the battery compartment. Install a 9-Volt Alkaline battery onto the clip and carefully re-install the battery compartment cover.
3. Slide the **On/Off** switch to the “**On**” position (Note: Turn the unit “**Off**” when not in use to preserve battery life).
4. Turn the **Adjustment Knob** clockwise to increase pressure, or counterclockwise to decrease pressure.
5. The red LED on the top of the unit will glow when the switch has been activated.
6. To set maximum sensitivity, turn the **Adjustment Knob** counterclockwise until the red LED indicator turns on. Then **slowly** turn the knob clockwise until the light goes out. The switch is now set for maximum sensitivity.

PLEASE NOTE:

This switch can be used on a tabletop or with auxiliary Magic Arm or gooseneck holders. It is also available as a **Saucer Switch** (Item No. 718)

The unit should be turned off when not in use to prolong battery life. If the unit fails to operate or if sensitivity is low, replace the battery.

Troubleshooting:

Problem: The **Adjustable Pressure Switch** does not activate your toy/device.

Action #1: Change the 9-V battery.

Action #2: Make sure that the **Adjustable Pressure Switch** is on a flat surface (not tilted or vertical). This provides for optimal functioning.

Action #3: Make sure that the connection between the **Adjustable Pressure Switch** and your toy/device is tight. There should be **no** gaps. This is a common error and an easy fix.

Action #4: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Care of Unit:

The **Adjustable Pressure Switch** can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the switch.