



Sticker Placement Guide



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

---

**Jumbo Switch- #787-R, Y, B, G, & P  
(Set of 5 Switches) #789**

---

---

**USER'S GUIDE**



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### Great features!

This jumbo switch is a greatly improved version of similar round switches. Mounting plate is removable. Comes with two free clear plastic covers: one with a lip and one without. Size: 5½"D x 1"H. Weight: ¾ lb.

### Operation:

1. The Jumbo Switch does **not** require any batteries to operate.
2. Plug the Jumbo Switch into the jack on your switch-adapted toy/device.
3. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
4. Make sure that the connection between the Jumbo Switch and your toy/device is tight. There should be no gaps.
5. Simply press anywhere on the Jumbo Switch's colored top to activate your toy/device.
6. The toy/device will only remain activated while the Jumbo Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

### Mounting Plate Options:

The Jumbo Switch has a removable mounting base option. To use without the base, simply remove the two small Phillips Head screws holding the base from sides of the switch body. Included are a set of 9 self-adhesive Non-Skid feet. When using the Jumbo Switch without the base only 3 feet are needed. (See Photo for proper placement). If using with the base all 9 feet are needed. (See Photo).

### Troubleshooting:

**Problem:** The Jumbo Switch does not activate your toy/device.

**Action #1:** Make sure that the connection between the Jumbo Switch and your toy/device is tight. There should be **no** gaps. This is a common error and an easy fix.

**Action #2:** Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

**Action #3:** Try a different adapter (if applicable) to rule this out as the source of the problem.

### Care of Unit:

The Jumbo Switch can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.