
Tickle Tube #7909

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Explore!

Experience the many tactile sensations of our fun Tickle Tube – bead chains, a mirror, gooshy pad, multi-colored blinking lights, music and vibration. Outside blinking lights encourage exploration. Music and vibration is adjustable. Lights and vibration can also be turned off. Size: 12"L x 8"W x 6 ¾"H. Requires 4 C Batteries. Weight: 3¼ lbs.

Operation:

1. The Tickle Tube requires 4 C batteries to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Carefully turn over unit to reveal battery compartments. Remove the Phillips Head screws from the battery compartment covers. Next slide the battery compartment covers off and insert the “C” batteries into the holder. Replace the covers and screws.
3. There are 3 controls on the back of the unit. One is your adjustable On/Off/Volume knob. This controls the volume of the music and turns the Tickle Tube ON/Off. The second is the On/Off toggle switch to control the six flashing locator lights. When set to On the six locator light will flash, encouraging exploration. The third is the Vibration adjustment knob. **Please Note:** when using the Vibration knob, the adjustment of the Vibrations does not take effect until the knob is turned approximately 50% of the way.
4. Set the ON/OFF/VOLUME switch to the desired VOLUME level. As you press your hand on the gooshy pad you will feel vibration, see multi-colored blinking lights and hear music. The music, lights and vibration will play for approximately 5 seconds each time the gooshy pad is pressed. Please Note: When the gooshy pad is pressed, if you have the locator lights set to, on they will turn off during activation. Once the lights, music and vibration stop they will turn back on.

Troubleshooting:

Problem: The Tickle Tube does not work.

Action #1: Check the batteries for proper installation, as noted in operation No. 2.

Action #2: Check batteries for freshness, if weak or dead replace with new batteries.

Action #3: Make sure there is nothing obstructing the beads from moving.

Care of Unit:

The Tickle Tube can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner. The ball can be removed for cleaning.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.